# 1Class Earth Leakage Detector User's manual

TYPE: GD6-L05A

GD6-L05R

2017. 02. 13 Version 1.00



Kyongbo Electric Co., Ltd.

# **Safety Precautions**

This document is for the safety of the user, and to prevent property damage.

Be sure to read the user manual carefully, and use the product accordingly.

The user manual must be kept in a place where it can be easily seen by the product user.



# WARNING

This symbol indicates the possibility of death or serious injury.



# **CAUTION**

This symbol indicates the possibility of injury or damage to properties only.

# **SYMBOLS**



Be sure not to do.



Be sure to follow the instruction.



# WARNING



• Do not perform any wiring work while the power is on or the product is in operation.

It may cause an electric shock.



 Must verify the status of the grounding connection before starting the operation.

Otherwise, it may cause an electric shock, damage, or a fire.



• Do not operate the product with wet hands.

It may cause an electric shock.



• Do not use if the clothing of the cable is damaged.

It may cause an electric shock.



Do not perform any wiring work when the main cable is live.
 It may cause an electric shock, and a damage or a fire by the charged voltage of the converter.



• Do not disassemble the product even if the power is not on, except for wiring or maintenance.

It may cause an electric shock by the charged current in the product.



 Let the electrical technician to perform wiring, test run, and maintenance.

Otherwise, it may cause an electric shock or a fire by a wrongful operation.



Perform terminal work when cutting a cable.

Otherwise, it may cause an electric shock from the naked part of the cable.



 Place the terminal cover on the terminal in the back after the wiring work.

Otherwise, it may cause an electric shock.



# **CAUTION**



• Apply the rated power to the power source terminal.

Otherwise, it may cause a damage to the product or a fire.



• P+, P-, F.G terminals enclose surge protection circuit inside the ELD, so do not withstand voltage test.



• Prevent screws, metal parts, water, or oil from entering the product.

It may cause a damage to the product or a fire.



• Extract and insert Case on a leveled surface.

Otherwise, it may cause a damage to the product.



• Do not store the product in a humid or a dusty area.

It may cause a damage to the product.



# **CONTENTS**

1.	General Features 6	
2.	Technical Data 6	
	2.1 Rated Control Source Voltage       6         2.2 Rated Frequency       6         2.3 Output Contacts       7         2.4 Case       7         2.5 Ground Element       7         2.6 Insulation Tests       8         2.7 Mechanical Tests       8         2.8 Temperature Tests       8         2.9 Other Operating Conditions       8         2.10 ZCT       9	
3.	Functional Description 10	0
	3.1 Construction	0
•	Appended 1. Dimensioned Drawings	4 5

#### 1. General Features

This Earth Leakage Detector (GD6-L05A, GD6-L05R) is used protect to leakage fault of less than AC600V line.

Operation produces earth fault to ZCT Primary line flowing earth current do detection through ZCT and is digital arithmetic type earth leakage detector that is used to check fault's extension breeding alarm.

#### **Features**

- □ 6 Circuit Digital Total arithmetric type Earth Leakage Detector
- ☐ The Earth Leakage Detector and ZCT are convenient handling through compatibility.
- □ Display the measured values and leakage line (7-Segment)
- □ Each circuit setting : Current detect sensitivity
- □ Malfunction Prevented through over input protection and filter circuit
- ☐ Inspect the equipment of leakage circuit conveniently, because can be select the restore method
- □ Can control for more Buzzer installation or Display through output contact. (GD6-L05R Type only)
- □ Convenience of the ZCT selection by various ZCT types for equipment capacity
- □ Enhanced EMC / EMI performance.
- □ Non Drawing out Type

#### 2. Technical Data

### 2.1 Rated Voltage & Current

AC/DC 110~220V, 15VA

### 2.2 Rated Frequency

60Hz (Sine Waveform)

# 2.3 Output Contacts

Signal contacts (Ta, Tc)				
Continuous Flow Electricity Capacity	10A at AC 250V			
Closing Capacity	1200VA			
Material	Silver Alloy			
Trip contacts (1a ~ 6a)				
Continuous Flow Electricity Capacity	5A at AC 250V			
Closing Capacity	750VA			
Material	Gold-clad Silver Alloy			

Trip contacts (1a~6a) is only GD6-L05R Type

### **2.4** Case

Structure	Non Drawing-out Type		
Color	Munsell No. N1.5 (black)		
Material	ABS Resin		

### 2.5 Ground Element

Operation Current	<ul> <li>0.2 - 0.5 - 1A (3 level setting)</li> <li>Operation to 53 ~ 75%</li> </ul>
Operation Time	Operate within 1.0 sec by 75% nominal operation current

### 2.6 Insulation Tests

Insulation Resistance	Over 5MΩ, 500Vdc	
Commercial Frequency Withstand Voltage	2.2kV, 50/60Hz, 1min	
Impulse Withstand Voltage	6kV, 1.2×50μs	

### 2.7 Mechanical Tests

	Applying Status	10~150 Hz, 0.981 औs, axis 3, 1 octave/min, axis per 1
Vibration	Non Applying Statsus	10~150 Hz, 4.950 M/s², axis 3, 1 octave/min, axis oper 20
Shock	Applying Status	500g, 15 Times
SHOCK	Non Applying Statsus	50g(Shock acceleration), 5 times, In any direction

## 2.8 Temperature Tests

Temperature Range	-10 °C ~ +50 °C
-------------------	-----------------

# 2.9 Other Operating Conditions

Altitude 1000m or less			
Condition where there is no abnormal vibration, shock, slope or influence of the magnetic field.			
Place where there is no explosive dust, flammable dust, or flammable / rusty gas, or salt			

# 2.10 ZCT Specifications

	ZL02	ZL03	ZL05	ZL06	ZL08	ZL10	ZL12	ZL15	ZL20	ZL16	ZL21	ZL26	
Туре	Cable Winding Type (The Inside Type)									Bus-Bar Winding Type (The Inside Type)			
Туре										` ` ` ` ` `			
Approval		누변 01-1							누변 01-3		누변 01-2		
Number	누변 01-1-1				누변 01-1-2			누변 01-3-1		누변 01-2-1		-1	
Rated primary current	80A less	100A less	250A less	400A less	600A less	800A less	1000A less	1500A less	2000A less	400A less	500A less	600A less	
Bore (mm)	Ф25	Ф30	Ф50	Ф65	Ф80	Ф100	Ф120	Ф150	Ф200	160 ×30	210 ×30	250 ×30	
Temp.	-10℃	~ +60°C											
Rated Output		When Zero sequence primary current 200mA, Rated output voltage is 100mV (Load Resistance 1.2 kΩ)											
Insulation Resistance	nsulation Retween secondary coil and case, over DC500V, 5 MQ												
Insulation Withstand Test	Between secondary coil and case, Input AC2200V, 60Hz, during 1min												
Shock wave Withstand voltage	Between primary and case, $1.2 \times 50 \mu\text{s}$ , 6kV, positive pole, negative pole each 1times												
Vibration	10~150 Hz, 10 m/s², axis 3, 1 octave/min, axis per 20												
Shock	50g shock, 5times Steel wire of Length 300mm, Thickness 3mm hang the 1kg pendulum. 15times drop to ZCT mounting board												
Weight(kg)	0.3	0.4	0.5	0.6	0.8	1.0	1.5	4.5	7.5	2.5	3.5	4.5	
Case Matarial	Flame-resisting ABS resin Epoxy resin Flame-resisting ABS resin												

### 3. Functional Description

#### 3.1 Construction

This ELD(GD6-L05A, GD6-L05R) is arithmetic type earth leakage detector, This have been manufactured for the alarm activated when setting-current over detection.

Leakage detector input current signal(see appended 2) been the digitalization of current signal through the 12 sampling after go through such as over input protection circuit, sample & hold, multiplexer, and it measured the RMS current of fundamental frequency element through the DFT(Discrete Fourier Transform), and it has no effect by harmonic and DC-offset.

#### 3.2 Functions

#### **Earth Dectecting Function**

This element can be fire accident spread minimization through alarm on expectation situation of fire accident when earth leakage occured on power system line of AC 600V or less.


#### **Metering Function**

Displayed value display ZCT primary zero sequence current value input to ELD as a current RMS display function.

Measurement Range	<ul> <li>0 ~ 5A</li> <li>Over 5A Current display 7-Segment as "HHH"</li> </ul>
Measurement Accuracy	• ± 10%

### 3.3 Product Structure

Front has the 7-segment, 7 LEDs, 5 Push button S/W and 6 of 3 level S/W, such as [Figure 1.] . And rear is see the [Figure 2.] .

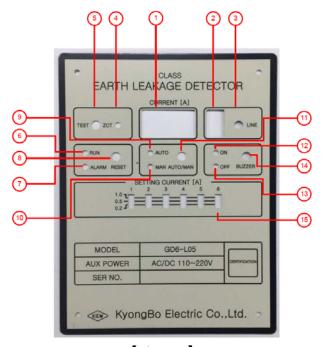


[Figure 1]





Contents	Description				
Measurement	ZCT primary earth leakage current RMS of each power system line is displayed on 7-				
Circuit display	Applied power system line is displayed on 7-segment when ZCT connection test and earth leakage detector operate test.  Applied power system line is displayed when Earth leakage fault occurred.				
Circuit selection Switch	Applied power system line selection when ZCT connection test and operation test.  The circuit switch for checking the earth leakage detector operated power system line after occuring of earth leakage fault.				
Connection status LED	When press the test switch, turn on the LED(yellow), if connection of ZCT with earth leakage detector was correct.				
Test Switch	The test switch that is tested the ZCT connection status and earth leakage detector operation of each circuit.				
Power LED	Turn on the power LED(green) when earth leakage detector power supply voltage is supplied.				
Alarm LED	Turn on the alarm LED(red) when earth leakage detector operated.				
Reset Switch	The Auto/Manual switch set to manual, and even if the earth leakage of power system line became to recover when the earth leakage detector operated, the operation status is continuous. if you want to restore, use this switch.				
Auto LED	Turn on the Auto LED(green) when Auto/Manual switch be Auto.				
Manual LED	Turn on the Manual LED(yellow) when Auto/Manual switch be Manual.				
Auto/Manual	Auto  If earth leakage power system line is recover, earth leakage detector operation status is recover automatically.				
Switch	Manual Operation status is continuous even if earth leakage power system line became recovered. If want to recover, must press the reset switch.				
Buzzer ON LED	Turn on the ON LED(green) when Buzzer ON/OFF switch be ON.				
Buzzer OFF LED	Turn on the OFF LED(yellow) when Buzzer ON/OFF switch be OFF.				
Buzzer ON/OFF Switch	Buzzer Alarm sound is operate when the earth leakage fault occurred on state of Buzzer ON.				
	Buzzer Alarm sound is not operate when the earth leakage fault occurred on state of Buzzer OFF.				
Detection sensitive setting Switch	The nominal operating current of each circuit can be control until 0.2-0.5-1.0A(3 level control).				
Fuse Holder	Fuse for protection				
Power ON/OFF Switch	Use when want to power ON/OFF of the earth leakage detector.				
Buzzer	Buzzer for alarm				
External relay contacts	The external Relay a contacts(1a~6a) and COM contacts of the each circuit. (GD6-L05R only)				
	· P+, P- : Power supply voltage connection contacts.				
External	Ta, Tc : Dry contacts for output.				
	· Z1~Z6 : ZCT secondary input contacts of each circuit. · Zc : ZCT secondary circuit common contacts.				
Contacts	· F.G : Frame Ground				
	Measurement display Circuit display Circuit selection Switch Connection status LED Test Switch Power LED Alarm LED Reset Switch Auto LED Manual LED  Auto/Manual Switch Buzzer ON LED Buzzer OFF LED Buzzer ON/OFF Switch Power ON/OFF Switch Fuse Holder Power ON/OFF Switch Buzzer External relay contacts				


# **Appended 1. Dimensioned Drawings**

#### ● **GD6-L05A/R**

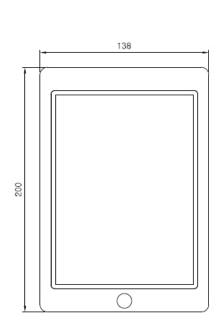

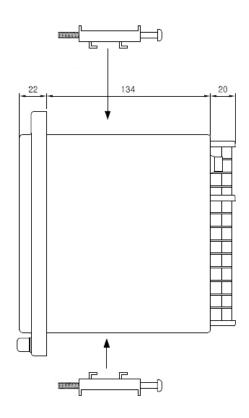


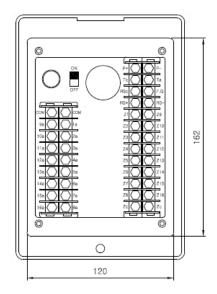

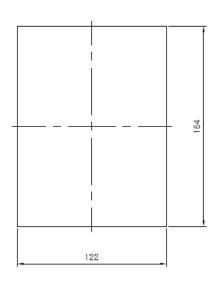


## Appended 2. Internal Block Diagram

#### ● **GD6-L05A**

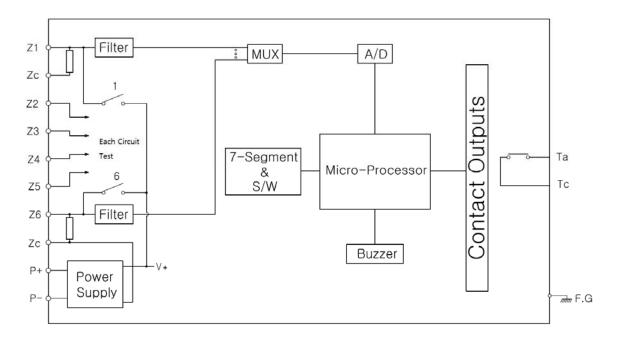


#### • GD6-L05R

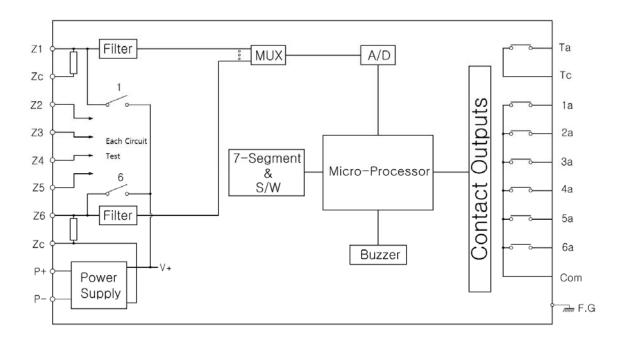

GD6-L05R

### **Appended 3. External Connection**

# ● GD6-L05A

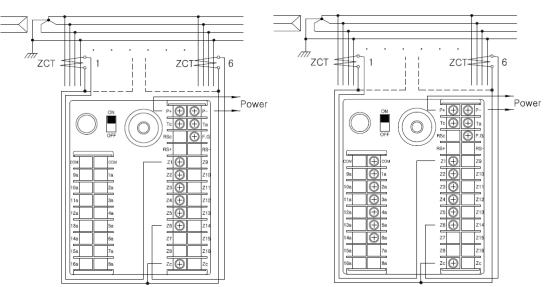


#### Caution)

- 1. This Connection is Example, User can set as needed
- 2. Dry contacts Ta, Tc, 1a~6a can be used if necessary But, 1a ~6a is GD6-L05R Type only
- 3. If connection is 3p4w, 4wire penetrate to ZCT.
- 4. Fuse capacity is  $0.5[A] \times 1$ ,  $1[A] \times 1$ .


## **Appended 4. ZCT Dimensioned Drawings**


• ZCT( ZL 02, 03, 05, 06, 08, 10, 12 )

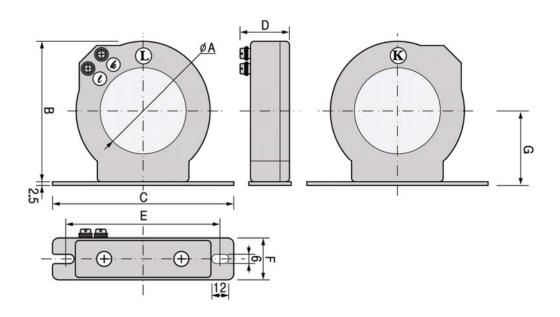

unit: mm Type ZL02 ZL03 ZL05 ZL06 ZL08 ZL10 ZL12 Size Α Ф25 Ф30 Ф50 Ф65 Φ80 Ф100 Ф120 70 75 91 123 В 108 140 160 C 100 130 150 180 D 40 50 E 80 130 160 F 30 40 G 72.5 37.5 40 48 56.5 64 82.5


### • ZCT(ZL 15, 20)

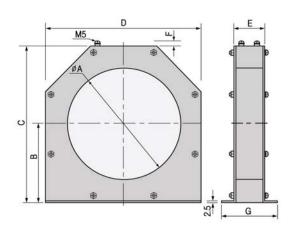

 

		unit : mm
Type Size	ZL 15	ZL20
A	150	200
В	112	143
С	222	284
D	220	282
Е	55	55
F	10	10
G	100	100
Н	80	80
I	180	180

### • ZCT(ZL 16, 21, 26)

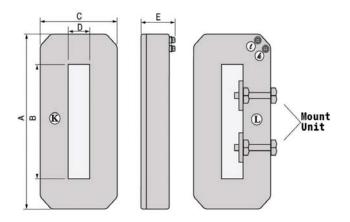

	unit : mm		
Type Size	ZL16	ZL 21	ZL 26
A	240	290	340
В	160	210	260
С	110		
D	30		
Е	50		