


Digital Overcurrent & Overvoltage & Undervoltage Relay Manual

TYPE : GDR-ACD01

2010. 2. 4
Version 1.10

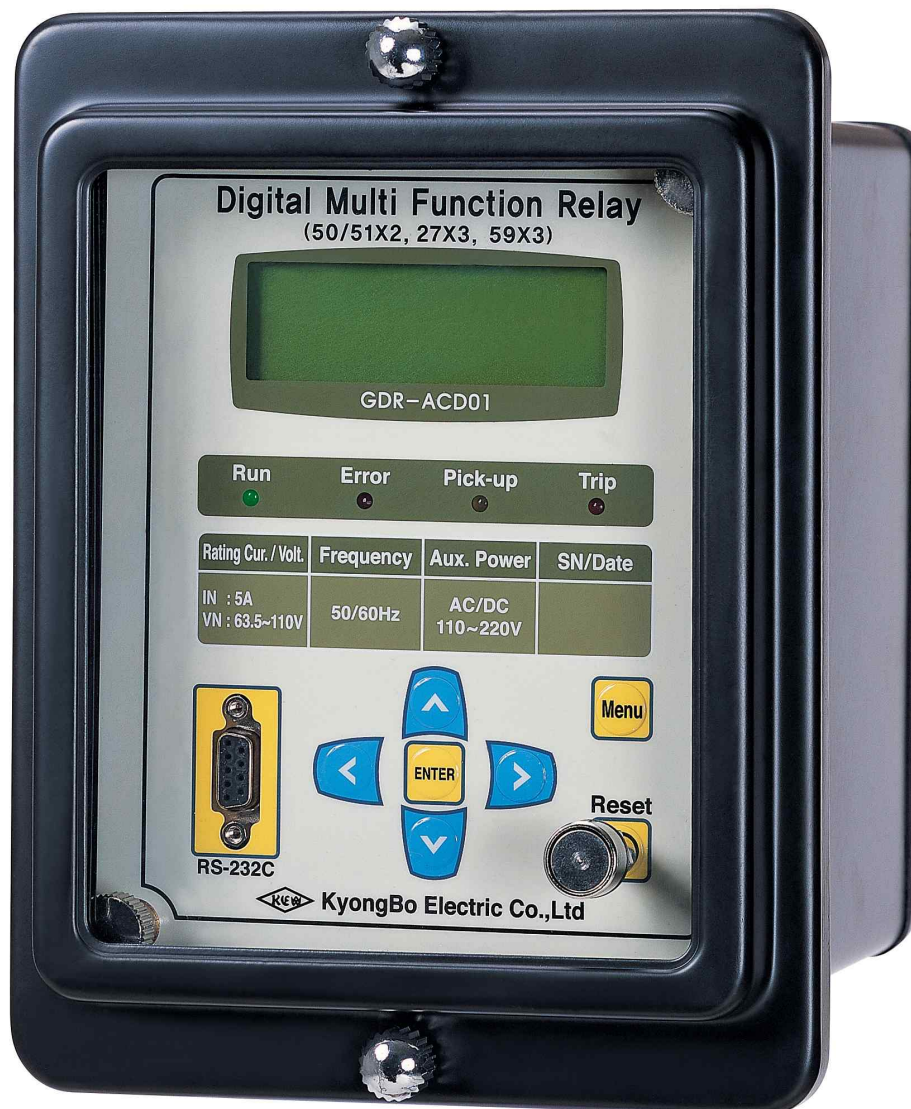

Kyongbo Electronics Co., Ltd.

Safety Precautions

This document is for the safety of the user, and to prevent property damage.
Be sure to read the user manual carefully, and use the product accordingly.
The user manual must be kept in a place where it can be easily seen by the product user.



WARNING

This symbol indicates the possibility of death or serious injury.



CAUTION

This symbol indicates the possibility of injury or damage to properties only.

SYMBOLS



Be sure not to do.



Be sure to follow the instruction.



WARNING



- **Do not perform any wiring work while the power is on or the product is in operation.**

It may cause an electric shock.



- **Must verify the status of the grounding connection before starting the operation.**

Otherwise, it may cause an electric shock, damage, or a fire.



- **Do not operate the product with wet hands.**

It may cause an electric shock.



- **Do not use if the clothing of the cable is damaged.**

It may cause an electric shock.



- **Do not perform any wiring work when the main cable is live.**

It may cause an electric shock, and a damage or a fire by the charged voltage of the converter.



- **Do not disassemble the product even if the power is not on, except for wiring or maintenance.**

It may cause an electric shock by the charged current in the product.



- **Let the electrical technician to perform wiring, test run, and maintenance.**

Otherwise, it may cause an electric shock or a fire by a wrongful operation.



- **Perform terminal work when cutting a cable.**

Otherwise, it may cause an electric shock from the naked part of the cable.



- **Place the terminal cover on the terminal in the back after the wiring work.**

Otherwise, it may cause an electric shock.



CAUTION



- **Apply the rated power to the power source terminal.**

Otherwise, it may cause a damage to the product or a fire.



- **Follow the rated load on the input and output connections.**

Otherwise, it may cause a damage to the product or a fire.



- **Prevent screws, metal parts, water, or oil from entering the product.**

It may cause a damage to the product or a fire.



- **Do not let the product be exposed to a direct sunlight.**

It may cause a damage to the product.



- **Extract and insert Case on a leveled surface.**

Otherwise, it may cause a damage to the product.



- **Do not store the product in a humid or a dusty area.**

It may cause a damage to the product.

Table of Contents

Order of Titles

1. General Features	9
2. Technical Data	10
2.1 Voltage, Current Input	10
2.2 Rated Control Source Voltage	10
2.3 Rated Frequency	10
2.4 Case	10
2.5 Time Overcurrent	11
2.6 Instantaneous Overcurrent	11
2.7 OverVoltage	12
2.8 UnderVoltage	12
2.9 Output Contacts	13
2.10 Insulation Test	14
2.11 Mechanical Test	15
2.12 Noise Test	15
2.13 Temperature, Humidity Test	16
2.14 Other Operating Condition	16
3. Protection Characteristics	17
3.1 Overcurrent Function	17
3.2 3-Phase OverVoltage Function	19
3.3 UnderVoltage Function	20
4. Subsidiary Function	21
4.1 Metering	21
4.2 Communication	21
4.2.1 RS-232C Communication	22
4.2.2 RS-485C Communication	22
4.3 Self Diagnosis Function	23
4.4 Fault Recording Function	24
5. Display Panel Construction	24
5.1 Front-side Display Panel Structure	24
5.2 Key Pad & Communication Connector	25
5.3 LED (Operating Indicators)	25

6. Display & Setting Modes	26
6.1 Key Operations and LCD Construction	26
6.1.1 LCD Default Display Condition, Backlight On/Off	26
6.1.2 LCD Screen Display and Principles of Key Operation	26
6.1.3 One-button Display	26
6.1.4 Menu-Tree	26
6.2 Setting Modes	27
6.2.1 Measurement Screen	29
6.2.2 Protection Setting	29
6.2.2.1 Protection ▶ Time OCR Setting	29
6.2.2.2 Protection ▶ INST. OCR Setting	30
6.2.2.3 Protection ▶ OVR Set Setting	31
6.2.2.4 Protection ▶ UVR Setting	32
6.2.3 Self-Diagnosis Screen	33
6.2.4 RS-485 Comm. Setting	33
6.2.5 System Config. Setting	34
6.2.5.1 System Config. ▶ Power system Setting	34
6.2.5.2 System Config. ▶ T/S Output Setting	35
6.2.5.3 System Config. ▶ Password Setting	37
6.2.6 Recorder	37
6.2.6.1 Recorder ▶ 1.Display Fault Screen	38
6.2.6.2 Recorder ▶ 2.Clear Fault Category	38
6.2.7 Test	39
6.2.7.1 Test ▶ Display Test	39
6.2.7.2 Test ▶ Contact Test	39
7. PC Software (SetGDRSeries)	42
7.1 Program Menu	43
7.2 Device Selecting	44
7.3 Communication Port Configuration	44
7.4 Setting Value Change Screen	45
7.4.1 Setting	45
7.4.2 Status	46
7.4.3 Report	48
7.5 Help	49

Order of Tables

【Table 2.1】	Input Voltage	10
【Table 2.2】	Rated Control Source voltage	10
【Table 2.3】	Outer Case	10
【Table 2.4】	Time Overcurrent Element	11
【Table 2.5】	Instantaneous Overcurrent Element	11
【Table 2.6】	OverVoltage Element	12
【Table 2.7】	UnderVoltage Element	12
【Table 2.8】	Output Contacts / Capacity	13
【Table 2.9】	Insulation	14
【Table 2.10】	Vibration, Shock, Earthquake	15
【Table 2.11】	Noise Endurance	15
【Table 2.12】	Temperature, Humidity	16
【Table 2.13】	Other Operating Conditions	16
【Table 3.1】	Relay Time Characteristics and Characteristic Values for Curve Selection	17
【Table 4.1】	Metering Display	21
【Table 4.2】	Communication Method	21
【Table 5.1】	Key Pad & Communication Connector	25
【Table 5.2】	LED (Operating Indicators)	25
【Table 6.1】	Time OCR Menu	30
【Table 6.2】	INST. OCR Menu	31
【Table 6.3】	OVR Menu	31
【Table 6.4】	UVR Menu	32
【Table 6.5】	RS-485 Comm. Setting	33
【Table 6.6】	T/S Connection Menus	36
【Table 6.7】	Setting Menus	43
【Table 7.1】	SetGDRSeries Program Menus	45
【Table 7.2】	Communication Port Configuration	47
Appendix 1. Product Factory Default Setting Values		50

Order of Figures and Diagrams

【Figure 3.1】 INST. OCR(IOCR) Logic Diagram	18
【Figure 3.2】 Time OCR(TOCR) Logic Diagram	18
【Figure 3.3】 OVR Logic Diagram	19
【Figure 3.4】 UVR Logic Diagram	20
【Figure 4.1】 RS-232C Circuit Diagram	22
【Figure 4.2】 RS-232C Connection	22
【Figure 4.3】 RS-485C Connection Diagram	22
【Figure 5.1】 Front Panel Display	24
【Figure 6.1】 Menu Tree	27
【Figure 7.1】 SetGDRSeries Default Screen	42
【Figure 7.2】 Relay Selecting	44
【Figure 7.3】 Communication Port Setting	44
【Figure 7.4】 GDR-ACD01 Setting	46
【Figure 7.5】 GDR-ACD01 Status	47
【Figure 7.6】 GDR-ACD01 Report	48
【Figure 7.7】 Help	49
Appended 1. Dimensioned Drawings - Unit : mm	51
Appended 2. Internal Block Diagram	52
Appended 3. External Connection Diagram	52
Appended 4. Inverse Time Characteristic Curve	53
Appended 5. Very Inverse Time Characteristic Curve	54
Appended 6. Extremely Inverse Time Characteristic Curve	55
Appended 7. Long Inverse Time Characteristic Curve	56
Appended 8. Kyongbo Induction Type Inverse Time(KEPCO Type) Characteristic Curve	57
Appended 9. Kyongbo Induction Type Very Inverse Time(KEPCO Type) Characteristic Curve	58
Appended 10. Definite Time Characteristic Curve	59
Appended 11. OverVoltage Element Inverse Time Characteristic Curve	60
Appended 12. OverVoltage Element Definite Time Characteristic Curve	61
Appended 13. UnderVoltage Element Inverse Time Characteristic Curve	62
Appended 14. UnderVoltage Element Definite Time Characteristic Curve	63

1. General Features

This Relay contains Relay elements of OCR×2, OVR×3 and UVR×3 at the same time, and is a Digital arithmetic relay designed and manufactured properly for the protection against Overcurrent, OverVoltage and UnderVoltage, so it is not just easy to change the operation time and operation voltage, but it can also record and store fault information thereby greatly enhancing the reliability of the cable line, and the main characteristics are as follows.

Features

- Total arithmetic type over-current, OverVoltage and UnderVoltage Relay.
- Variety of timing characteristics
 - OCR : 7 timing characteristics enclosed
 - OVR : Inverse Time, Definite Time
 - UVR : Inverse Time, Definite Time
- Duration of maintaining output contact is 0.00 ~ 60.00Sec (0.01Sec Step), and variable setting is possible.
- Set value and measured values are Displayed digitally through LCD Screen. (4 x 20 LCD Screen)
- Enhance reliability with surveillance function at all times.
- Free selection of frequency Settings according to the rated frequency of the line. (50 / 60Hz)
- Possible to set each of 7 Relay contact output (T/S Output) to 10 modes, and all of these can be used for Alarms.
 - contact for Trip(1a), contact for Signal(6a)
- Reliability is increased by the operation through output contacts when the Relay is in abnormal state.
- Convenient PC Applications
 - SetGDRSeries : change setting values, verify the measurements, verify Fault information, display status, Remote Reset.
- Possible to self-test through manual Trip command(Contact Test)
- Maintains thorough security using password input when changing setting values
- Various communications supported
 - Communication Methods : RS-232C, RS-485C (SCADA communications)
 - Supported Protocol : MODBUS
- Increased EMC / EMI performance
- Applied Standard : Korea Electrical Manufacturers' Cooperative Standard (KEMC1120)

2. Technical Data

2.1 Voltage, Current Input

【Table 2.1】 Input Voltage

Rated Voltage (V_N)	AC 63.5 ~ 110V
Rated Current (I_N)	AC 5A
Overload Endurance	1.15 times rated voltage / 3 hours
	2 times rated current / 3 hours
	20 times rated current / 2 seconds
Burden	0.5VA or less

2.2 Rated Control Source Voltage

【Table 2.2】 Rated Control Source Voltage

Rated Control Source Voltage	AC/DC 110 ~ 220V (free voltage)	
Overload Endurance	1.3 times rated voltage / 3 hours	
Burden	Always	30W or less
	Operation	70W or less

2.3 Rated Frequency

50Hz or 60Hz (Sine Waveform)

2.4 Case

【Table 2.3】 Case

Case Structure	Flushed Drawer Type
Case Color	Munsell No. N1.5 (Black)
Case Material	Fe (Steel)

2.5 Time Overcurrent

【Table 2.4】 Time Overcurrent Element

Operation Value	2.0 ~ 12.5A (0.1A Step)
Operation Time Characteristics	Inverse Time , Very Inverse Time , Extreme Inverse Time , Long Inverse Time Kyongbo Induction Type (KEPCO Type) Inverse Time , Kyongbo Induction Type (KEPCO Type) Very Inverse Time , Definite Time
Operation Time Ratio	0.1 ~ 10.0 (0.1 Step)
Definite Time Operation Time	0.04 ~ 60.00Sec (0.01Sec Step)
Release Delay Time	0.00 ~ 60.00Sec (0.01Sec Step)
Release Value	At least 95% of the Setting Value
Operation Value Precision Ratio	Within $\pm 5\%$ of the Setting Value

2.6 Instantaneous Overcurrent

【Table 2.5】 Instantaneous Overcurrent Element

Operation Value	10 ~ 90A (1A Step)
Operation Time Characteristics	Instantaneous Time ($\leq 40\text{ms}$), Definite Time
Definite Time Operation Time	0.04 ~ 60.00Sec (0.01Sec Step)
Release Delay Time	0.00 ~ 60.00Sec (0.01Sec Step)
Release Value	At least 95% of the Setting Value
Operation Value Precision Ratio	Within $\pm 5\%$ of the Setting Value

2.7 OverVoltage

【Table 2.6】 OverVoltage Element

Operation Value	65 ~ 170V (1V Step)
Operation Time characteristic	Inverse Time, Definite Time
Operation Time Ratio	0.1 ~ 10.0 (0.1 Step)
Definite Time Operation Time	0.04 ~ 60.00Sec (0.01Sec Step)
Release Delay Time	0.00 ~ 60.00Sec (0.01Sec Step)
Release Value	At least 95% of the Setting Value
Operation Value Precision Ratio	Within $\pm 5\%$ of the Setting Value

2.8 UnderVoltage

【Table 2.7】 UnderVoltage Element

Operation Value	30 ~ 105V (1V Step)
Operation Time Characteristics	Inverse Time, Definite Time
Operation Time Ratio	0.1 ~ 10.0 (0.1 Step)
Definite Time Operation Time	0.04 ~ 60.00Sec (0.01Sec Step)
Release Delay Time	0.00 ~ 60.00Sec (0.01Sec Step)
OP MODE	DIGITAL, INDUCTION
Operation Recovery MODE	ON, OFF
Operation Recovery Time	0.1 ~ 180.0Sec (0.1Sec Step)
Release Value	At least 95% of the Setting Value
Operation Value Precision Ratio	Within $\pm 5\%$ of the Setting Value

2.9 Output Contacts / Capacity

[Table 2.8] Output Contacts / Capacity

T / S1 contacts (Trip contacts) - 1a Contact	
Rated Power	AC 250V, DC 125V
Continuous Flow Electricity Capacity	20A (AC 250V)
0.5 sec. Close Circuit Capacity	30A (DC 125V)
Closing Capacity	6250VA
Material	Silver alloy
T / S2 ~ T / S7 Contacts (Signal contacts) - 6a Contact	
Rated Power	AC 250V, DC 125V
Continuous Flow Electricity Capacity	5A (AC 250V)
0.5 sec. Close Circuit Capacity	5A (DC 125V)
Closing Capacity	1250VA / 150W
Material	Gold-plate silver alloy
Healthy Alarm - 1b Contact	
Rated Power	AC 250V, DC 125V
Continuous Flow Electricity Capacity	10A (AC 250V)
Open Circuit Capacity	DC 125V, 30W, Time constant(25ms), 1A
Closing Capacity	2500VA / 300W
Material	Silver alloy

2.10 Insulation Test

【Table 2.9】 Insulation

Insulation Resistance	DC 500V	Electric Circuit to Ground	10MΩ	IEC60255-5
		Between Electric Circuits	5MΩ	
		Between Electric Circuit Connections		
Commercial Frequency Withstand Voltage	50/60Hz, 1min	Electric Circuit Bundle to Ground	2kV	IEC60255-5
		Between Electric Circuits	1kV	
		Between Connection Circuit Contacts		
Impulse Withstand Voltage	1.2/50μs, 3 times each for positive/negative polarity	Electric Circuit Bundle to Ground	5kV	IEC60255-5
		Between Transformer Circuits		
		Between Transformer Control Circuits		
		Between Control Circuits	3kV	
		Between Transformer Circuit Contacts		
		Between Control Power Circuit Contacts		

Caution) AUX POWER and 485 Communication Circuits enclose surge protection circuit inside the relay, so do not test insulation resistance test and withstand voltage test.

2.11 Mechanical Test

【Table 2.10】 Vibration, Shock, Earthquake

Vibration	Vibration Response Test	10 ~ 150Hz, 0.5G, Front/Back, Left/Right, Up/Down 1 time
	Vibration Endurance Test	10 ~ 150Hz, 1G, Front/Back, Left/Right, Up/Down 20 times
Shock	Shock Response Test	5G, Front/Back, Left/Right, Up/Down 3 times
	Shock Withstand Test	15G, Front/Back, Left/Right, Up/Down 3 times
	Bump Test	10G, Front/Back, Left/Right, Up/Down 100 times
Earthquake	1 ~ 8Hz	x : 3.5mm, y : 1.5mm, Sweep : 1 time
	8 ~ 35Hz	x : 1g, y : 0.5g, Sweep : 1 time

2.12 Noise Test

【Table 2.11】 Noise Endurance

1MHz burst disturbance	1MHz, 75ns, 400Hz, 2Sec	Common mode	2.5kV	IEC60255-22-1
		Differential mode	1.0kV	
EFT Burst	Applied Voltage	4kV		IEC60255-22-4
	Repeated Frequency	2.5kHz		
Electrostatic Discharge	Air discharge	8kV		IEC60255-22-2
	Contact discharge	6kV		
Surge Electrical Disturbance	1.2/50 μ s, 8/20 μ s, 30sec, 3 times	Common mode	2.0kV	IEC60255-22-5
		Differential mode	1.0kV	
Radio Frequency Radiation Endurance	80MHz ~ 1GHz, 10V/m, 1sec			IEC60255-22-3
Radio Frequency Conduction Endurance	150kHz ~ 80MHz, 10V/m, 1sec			IEC60255-22-6

2.13 Temperature, Humidity Test

【Table 2.12】 Temperature, Humidity

Temperature Range	Operation Assurance	-10℃ ~ +55℃
	Recovery Assurance	-20℃ ~ +60℃
Relative Humidity		Daily Average 30% ~ 90%

2.14 Other Operating Condition

【Table 2.13】 Other Operating Conditions

Surface Height	1000m or less
Condition where there is no abnormal vibration, shock, slope or influence of the magnetic field	
Place where there is no explosive dust, flammable dust, or flammable / rusty gas, or salt	

3. Protection Characteristics

3.1 Overcurrent Function

This relay contains the Instantaneous Time characteristic, Inverse Time characteristic, and Definite Time characteristic to be used for single phase, 2-phase, and 3-phase overcurrent and short circuit protection. GDR-ACD01 marks the instantaneous element as INST.OCR(IOCR), and the definite time as Time OCR(TOCR).

The instantaneous time characteristic is a function to output Trip signal immediately when a current over the setting value is input, the Trip time is less than 40ms, and the inverse time characteristic is a function between the current and the time, and the operation time is shorter as the current is bigger. There are 4 international standard(IEC) inverse time characteristics and 2 KEPCO type inverse time characteristics equipped.

When applying the inverse time characteristics, select one from the 6 characteristics.

4 Inverse characteristics following the international standard(IEC255-4), and the time and current relationship function of 2 KEPCO type characteristics are as follows.

$$T = \left(\frac{K}{I^L - 1} + C \right) \times \frac{M}{10} (\text{sec})$$

T = Operation Time, K and C = Relay characteristic value

I = Relay input current / Relay operation setting value


L = Characteristic curve index, M = Operation time ratio

【Table 3.1】 Relay Time Characteristics and Characteristic Values for Curve Selection


Time Characteristic	Characteristic Value			Indication Mark	Note
	K	L	C		
Inverse Time	0.14	0.02	0	NI	-
Kyongbo Induction Type Inverse Time	0.11	0.02	0.42	KNI	KEPCO Type
Very Inverse Time	13.5	1	0	VI	-
Kyongbo Induction Type Very Inverse Time	39.85	1.95	1.084	KVI	KEPCO Type
Extreme Inverse Time	80	2	0	EI	-
Long Inverse Time	54	1	0	LI	-
Definite Time	-	-	-	DT	-

When setting the relay, selecting the time characteristic curve will decide the K, L, C values in the above table.

Logic Diagram for overcurrent element operation is as follows.

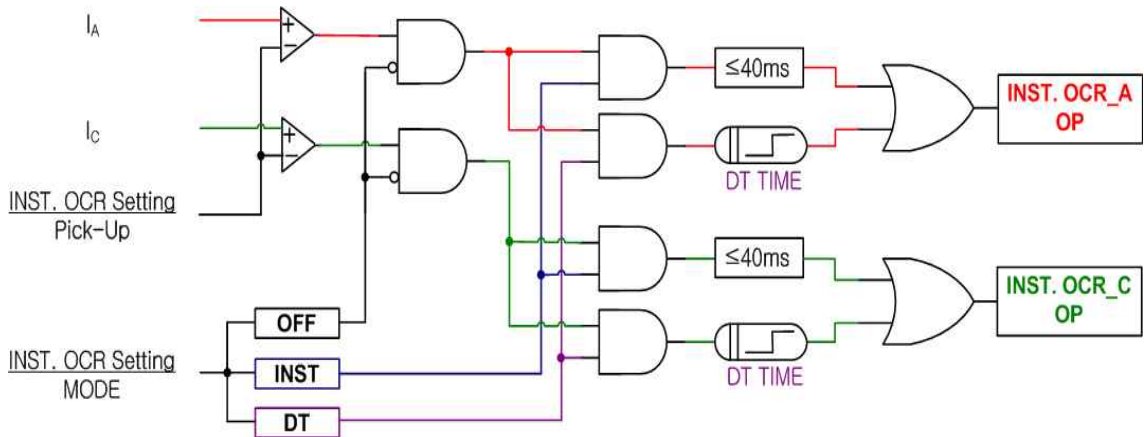

【Figure 3.1】 INST. OCR(OCR) Logic Diagram

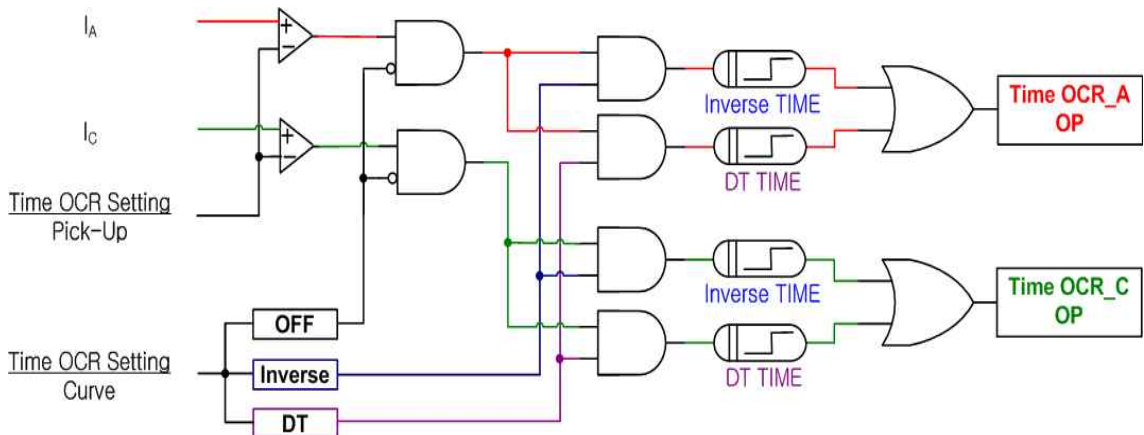

【Figure 3.2】 Time OCR(OCR) Logic Diagram

3.2 3-Phase OverVoltage Function

This relay contains the Inverse Time characteristic and Definite Time characteristic to be used for OverVoltage protection.

This relay made by line-to-line voltage at 3phase 3line.

The inverse time characteristic is a function between the voltage and the time, and the operation time is shorter as the voltage is bigger.

The time and voltage relationship function is as follows.


$$T = \left(\frac{10.5}{V^{1.75} - 1} \right) \times \frac{M}{10} (\text{sec})$$

T = Operation Time

V = Relay input voltage / Relay operation setting value

M = Operation time ratio

Logic Diagram for OverVoltage element operation is as follows.

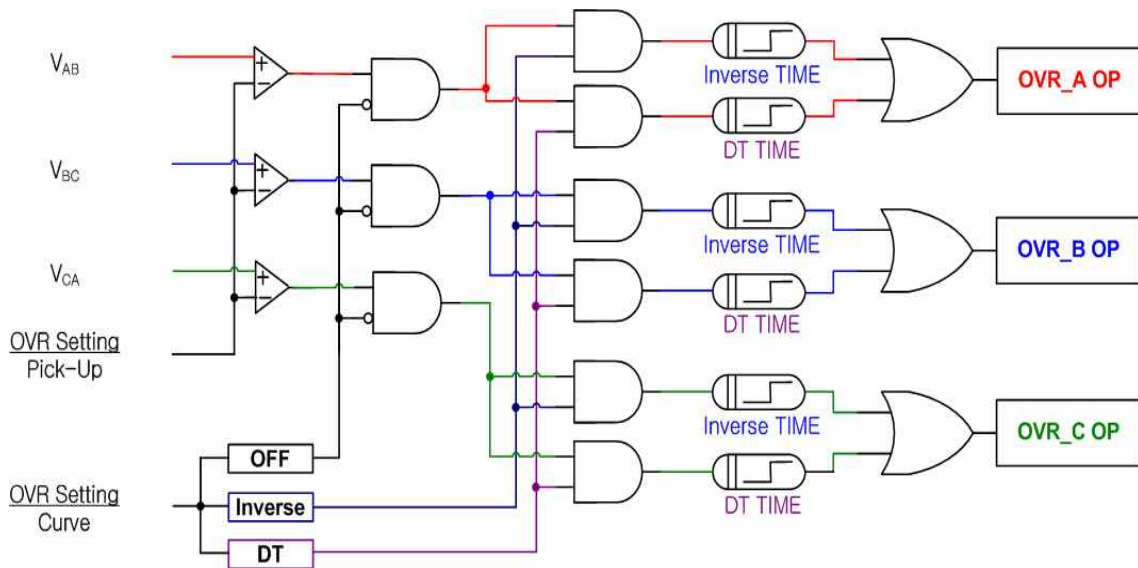

【Figure 3.3】 OVR Logic Diagram

3.3 UnderVoltage Function

This relay contains the Inverse Time characteristic and Definite Time characteristic to be used for UnderVoltage protection. OP MODE can be set to DIGITAL and INDUCTION mode. When it is set to DIGITAL, the Undervoltage element does not operate when the initial power is supplied to the relay or after Reset recovery, and it only operates when the voltage goes above the setting value and drops under the setting value. When it is set to INDUCTION, it maintains the induction type relay operation characteristic, so the existing induction type relays are generally acceptable. Several recovery functions are included in the state operated by UnderVoltage element, the recovery function for the voltage going above the setting value, the recovery function when Reset Key is pressed when the operation mode is set to Digital, and the recovery function after the recovery time(RST-Time) when recovery function(RST-Mode) is ON.


The time and voltage relationship function is as follows.

$$T = \left(\frac{8}{1 - V^{2.2}} \right) \times \frac{M}{10} (\text{sec})$$

T = Operation Time

V = Relay input voltage / Relay operation setting value

M = Operation time ratio

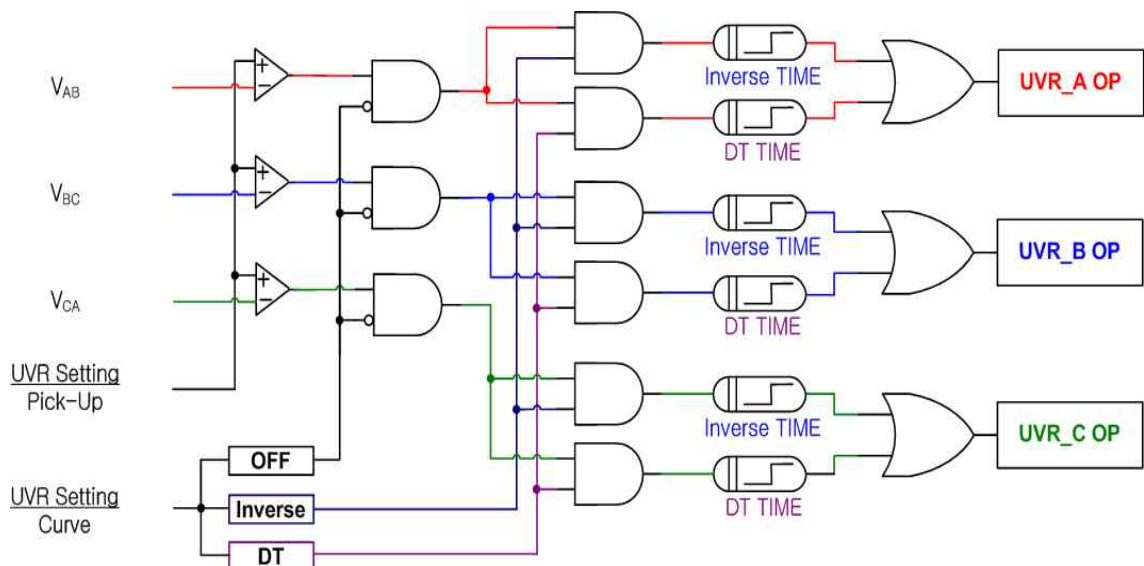

【Figure 3.4】 UVR Logic Diagram

4. Subsidiary Function

4.1 Metering

This relay has the metering function of the 3-phase and current.

【Table 4.1】 Metering Display

Category	Characteristic
I_a, I_c phase Current	<ul style="list-style-type: none"> ● Measure the effective value of the Current ● 1st Current of the relay input current converted by CT ratio ● Metering Range : 0 ~ 200A (When Phase CT Ratio is 5:5)
3 Phase Voltage	<ul style="list-style-type: none"> ● Measure the effective value of the voltage ● 1st voltage of the relay input voltage converted by CT ratio ● Metering Range : 0 ~ 200V (When PT Ratio is 1:1)

Except, the current over the metering range is displayed as FULL.


4.2 Communication

This relay offers the general purpose RS-232C / RS-485C communication method, and the maximum speed of 19200 bps data transmission is possible. There are 1 RS-232C port in the front and 1 RS-485C port in the back of the relay. The RS-232C communication port in the front of the relay is connected to PC and used for changing the setting values, viewing the measurement, verifying Fault information, display the status, and Remote Reset, and the RS-485C communication port in the back is used for remote SCADA communication.

【Table 4.2】 Communication Method

Protocol	Communication Method	● RS-232/485
	Supported Protocol	● MODBUS
Communication Protocol (RS-485C)	Communication Distance	● 1.2km
	Communication Cable	● General RS-485C Two-Pair cable
	Communication Speed	● 300 ~19200 bps
	Communication Method	● Half-Duplex
	Maximum In/Out Voltage	● -7V ~ +12V
Communication Port	Front Display Panel	<ul style="list-style-type: none"> ● RS232 Port 1 ● 19200 BPS, MODBUS Protocol
	Back	<ul style="list-style-type: none"> ● RS485 Port 1 ● 300 ~ 19200 BPS, MODBUS Protocol ● SCADA Communication ● Contact No. : 13(+), 15(-)

4.2.1 RS-232C Communication

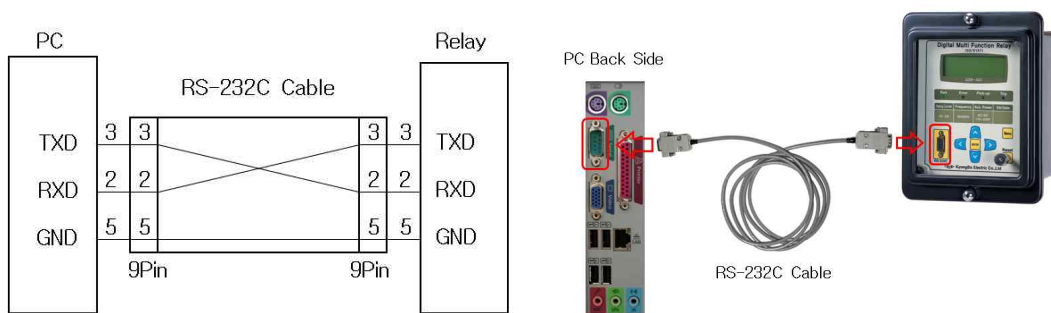


【Figure 4.1】 RS-232C Circuit Diagram 【Figure 4.2】 RS-232C Connection

- The RS-232C communication cable supplied with this product uses a cross cable which has No. 2 and No. 3 pins crossed as shown in **【Figure 4.1】** , so using ordinary direct cable will not enable the communication.
- If there is no RS-232C port in the PC, and uses USB port, only with USB to 232 cable cannot make connection, so please use USB to 232 cable with the cross cable supplied with this product together.

4.2.2 RS-485C Communication

To connect to higher level monitoring control system, insulated RS-485 Half Duplex communication method is provided. This communication method can connect with multi-drop, and the maximum communication distance is 1.2km. The end part of RS-485C cable should be connected with 120Ω resistor parallel as shown in the following figure.

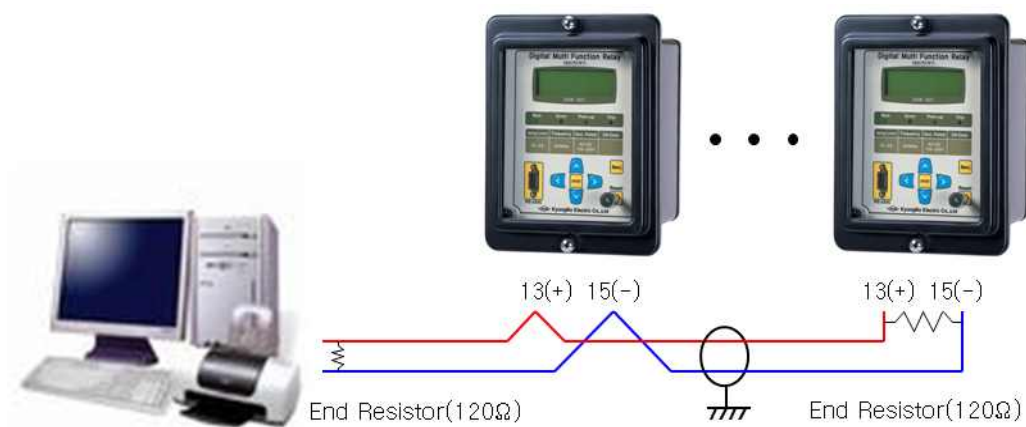

【Figure 4.3】 RS-485C Connection Diagram

4.3 Self Diagnosis Function

Self Diagnosis function monitors the operation status of the relay at all times to prevent abnormal/failure operation of the equipment. If an abnormality is detected, red Error LED is lighted, and the Self Diagnosis result category in the Self-Diagnosis menu is displayed as FAIL. Also, when a fault occurs, the operation output of the relay element is blocked immediately, and it is displayed on LCD and LED until the fault is cleared.

Main diagnosis categories are as follows.

- Power Fail
- CPU Watchdog Fail
- Memory Fail
- Value outside Setting

4.4 Fault Recording Function


This function displays the accumulated count of operation, current, operation element, and relay operation time.

It can be viewed using PC Tool(SetGDRSeries) through RS-232C communication.

5. Display Panel Construction

5.1 Front-side Display Panel Structure



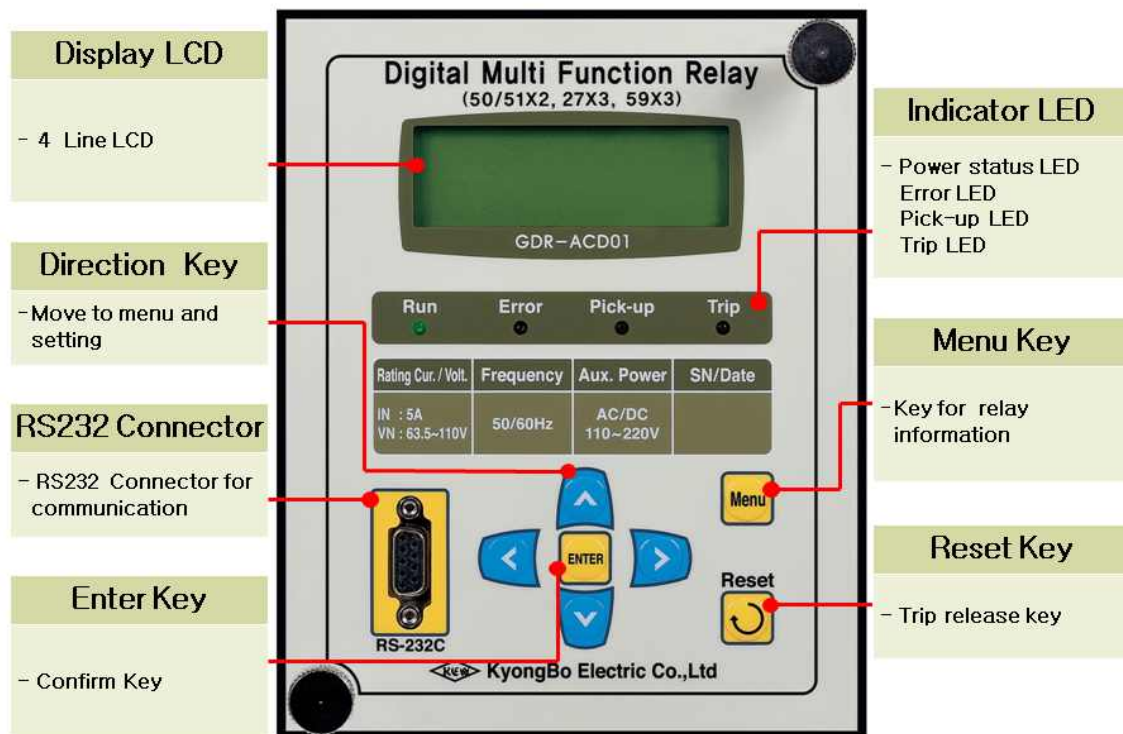




The front-side display panel has 20 x 4 LCD, 4 LEDs, 7 KeyPad, and RS-232C Communication Connector as follows. There is a transparent cover on the front-side to prevent dust or foreign substance from entering and to stop unnecessary key operations. When changing the setting value, it is required to input password to prevent unauthorized user other than designated person to change the setting, and the protection function is still operational during the inquiry through LCD.



【Figure 5.1】 Front-side Display


5.2 Key Pad & Communication Connector

【Table 5.1】 Key Pad & Communication Connector

Direction (   ) Key	Used for setting value changes and moving between menus.
ENTER () Key	Key used to confirm changes in menu or setting.
Reset () Key	Key used for Indicator Reset when the relay is in operation, and to verify the settings without opening the cover when a fault has not occurred.
Menu () Key	Key to verify and change all the information such as setting values and fault record.
RS-232C Connector	RS-232C Connector enabling setting value changes from PC with mutual communication with PC.

5.3 LED (Operating Indicators)

【Table 5.2】 LED (Operating Indicators)

Run (Green)	As a LED indicating that the power is supplied and the CPU of the protection relay is running normally, it is lighted in normal condition, and if it is not lighted when the power is supplied, it means the CPU is not running, and there is a serious problem in the equipment, so it requires repair or replacement.
Error (Red)	When there is a fault in the equipment and the fault is detected by the self-diagnosis function, Error LED is lighted red, and the protection relay element operation is blocked. The details of the fault can be viewed through LCD with Key operation, and when the fault is cleared, it is recovered with the lighted LED turning off.
Pick-up (Yellow)	When the OCR, OVR and UVR element are Picked Up by matching the set condition, Pick-Up LED is lighted yellow, and it is turned off automatically when it is recovered.
Trip (Red)	As an operation indicator of OCR, OVR and UVR element, when the element operates, it outputs Trip and Trip LED is lighted red at the same time. Even if the protection element is recovered, the lighted LED at this state is kept on until Reset () Key is pressed.

6. Display & Setting Modes

6.1 Key Operation and LCD Construction

6.1.1 LCD Initial Display Status, Backlight On/Off





After the power is ON, the follow default screen is displayed.

 



If there is a fault in the equipment, System Error! is displayed instead of System OK!


The LCD Backlight is turned Off automatically after 3 minutes has passed without Key operation.

6.1.2 LCD Screen Display and the Principles of Key Operation

The information Displayed on LCD Screen is made of a Tree structure, and you can find and select the information in the Tree structure using Left(), Right (), Up(), Down() Keys.

The category that the cursor(*) is pointing indicates the current selected category, and pressing  Key will Display detail categories. To exit the current category, press .

6.1.3 One-button Display

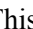
You can view the measured values, setting values, and diagnosis status sequentially on LCD Screen by pressing Reset () Key repeatedly. This enables viewing without opening the transparent cover on the front part of the Relay.

When Operating Indicator is turned on as the Relay element is operational, it operates as Indicator Reset.

6.1.4 Menu-Tree

【Figure 6.1】 Menu Tree summarized the menu structure that can be Displayed on the Relay.


Operations and descriptions of each menu are stated in detail in 6.2 Setting Modes.

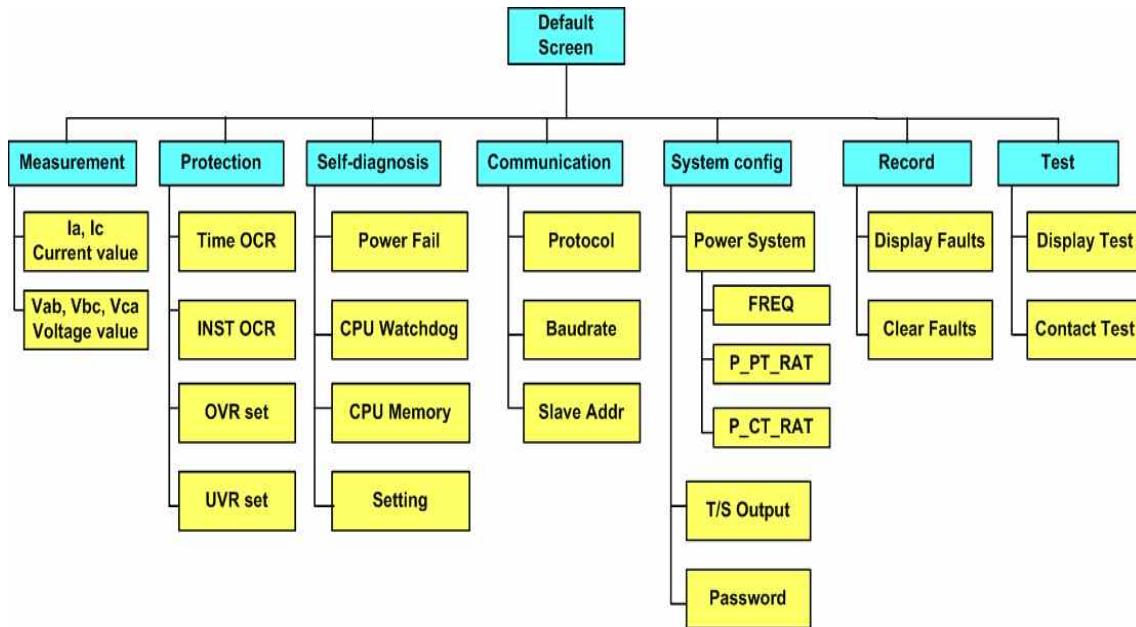




【Figure 6.1】 Menu Tree


6.2 Setting Modes

For this Relay to operate properly, it needs to be set appropriately to the system environment in which it is used. The Settings and Display elements are composed of 7 categories of Measurement, Protection, Self-Diagnosis, RS-485 Comm., System Config, Recorder, and Test.


Press Menu () Key from the default LCD screen, then the screen asking for Password appears.

E n t e r P a s s w o r d : * * * *

- (1)  Key : Changes the number
- (2)  Key : Changes the location of the digit
- (3) ENTER () Key : Confirm the password after the input of password.


Password is composed of 4 digits from 0 ~ 9, and the default password of the relay is set to "0000", so pressing ENTER () Key from the password input screen will convert directly to Setting screen.

The Setting default screen is as follows.

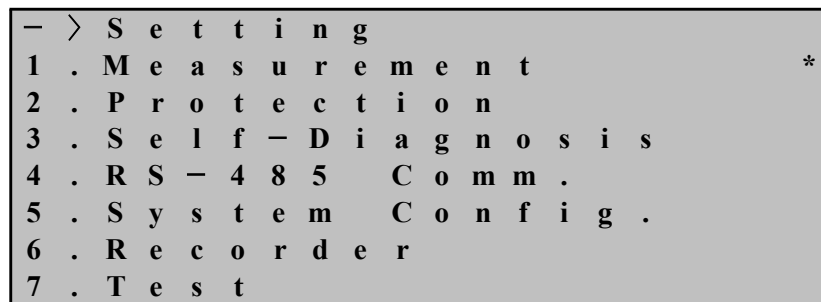

For example, to change PickUp voltage of the UnderVoltage, operate as the following order.

- (1) Press Key : (*) symbol moves to 2.Protection category
- (2) Press Key : moves to Protection screen
- (3) Press Key : (*) symbol moves to 4.UVR.Set category
- (4) Press Key : moves to UVR Set Screen
- (5) Press Key : (*) symbol moves to 2.PICK-UP category
- (6) Press Key : currently stored voltage value of 2.PICK-UP flashes.
- (7) Press Key : changes to desired setting value
- (8) Press ENTER () Key : temporarily stores the decided value
- (9) Press Key : moves to Protection Screen
- (10) Press Key : moves Setting Screen
- (11) Press Key : displays the following screen. "No" category flashes.

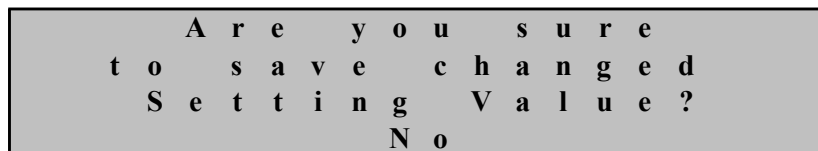

- (12) Press Key : select Yes from Yes and No categories
- (13) Press ENTER () Key : stores the changed value and moves to the default screen

If selecting No in (12) and pressing ENTER () Key will erase the changed value, and the original setting data is restored.

Also, until ENTER () Key is pressed at "Are you sure to save changed Setting Value? Yes", changed setting value does not affect the protection relay, and the original setting values are applied.


All the changes to each category can be done as of the above example.

6.2.1 Measurement Screen

Measurement Screen displays the measured voltage and current value.
Measurement Screen has the following category.

- >	M e a s u r e m e n t				
I a	:	2	.	4 5	A
I c	:	2	.	4 5	A
V a b	:	1 1 0	.	0	V
V b c	:	1 1 0	.	0	V
V c a	:	1 1 0	.	0	V

Display the current and voltage value for each phase (Display as CT, PT 1st Side : 2nd Side Current multiplied by CT, PT Ratio)


Pressing  Key in the Measurement Screen will exit this menu and convert to the upper menu.

6.2.2 Protection Setting


Protection Setting has categories to perform Time OCR, INST. OCR, OVR, UVR protection function.

Select 2. Protection category in Setting, and the following screen appears.

- >	P r o t e c t i o n				
1	.	T i m e		O C R	
2	.	I N S T .		O C R	
3	.	O V R		S e t	
4	.	U V R		S e t	


Pressing  Key in the Protection Screen will exit this menu and convert to the default screen of Setting.

6.2.2.1 Protection ► Time OCR Setting

It is a category to set the definite time overcurrent element, and selecting() 1. Time OCR category in Protection will display the following screen.

```

- >   T i m e   O C R
1 . C U R V E           :           L I      *
2 . P I C K - U P       :           5 . 0 A
3 . T I M E   D I A L   :           1 0 . 0
    
```


Press  Key in Time OCR screen, then it will exit this menu and convert to the upper menu.

Detail categories that can be set in Time OCR are as follows.

[Table 6.1] Time OCR Menu


Category	Range	Setting Unit	Default Value	Description
Curve	OFF, NI, VI, EI, LI, KNI, KVI, DT	-	KVI	Set definite time characteristic
PickUp	2.0 ~ 12.5A	0.1A	5.0A	Definite time Pickup value
Time Dial	0.1 ~ 10.0	0.1	10.0	Set time ratio
DT-Time	0.04 ~ 60.00Sec	0.01Sec	-	Set the time of definite time

6.2.2.2 Protection ► INST. OCR Setting

It is a category to set the instantaneous time overcurrent element, and selecting() 2.INST. OCR category in Protection will display the following screen.

```

- >   I N S T .   O C R
1 . M O D E           :           D T      *
2 . P I C K - U P       :           5 0 A
3 . D T - T I M E       :           0 . 0 4 s
    
```


Press  Key in INST. OCR screen, then it will exit this menu and convert to the upper menu.

Detail categories that can be set in INST. OCR are as follows.


【Table 6.2】 INST. OCR Menu

Category	Range	Setting Unit	Default Value	Description
Mode	OFF, INST, DT	-	DT	Set OFF, instantaneous time, definite time
PickUp	10 ~ 90A	1A	50A	Instantaneous Pickup value
DT-Time	0.04 ~ 60.00Sec	0.01Sec	0.04Sec	Set the time of definite time

6.2.2.3 Protection ► OVR Set Setting

It is a category to set the OverVoltage element, and selecting() 1. OVR Set category in Protection will display the following screen.


- >	O V R	S e t		
1 .	C U R V E	:	N I	*
2 .	P I C K - U P	:	1 2 0 . 0 V	
3 .	T - D I A L	:	1 0 . 0	

Press  Key in OVR screen, then it will exit this menu and convert to the upper menu. Detail categories that can be set in OVR are as follows.


【Table 6.3】 OVR Menu

Category	Range	Setting Unit	Default Value	Description
CURVE	OFF, NI, DT	-	NI	Set OFF, Inverse Time, Definite Time
PICK-UP	65 ~ 170V	1V	130V	Definite Time Pickup Value
T-DIAL	0.1 ~ 10.0	0.1	10.0	Set time ratio
DT-TIME	0.04 ~ 60.00Sec	0.01Sec	-	Set the time of Definite Time

6.2.2.4 Protection ► UVR Setting

It is a category to set the UnderVoltage element, and selecting() 2. UVR category in Protection will display the following screen.

- >	U V R S e t			
1 .	C U R V E	:	N I	*
2 .	P I C K - U P	:	1 0 0 . 0 V	
3 .	T - D I A L	:	1 0 . 0	
4 .	O P _ M O D E	:	D i g i t	
5 .	R S T _ M O D E	:	O N	
6 .	R S T _ T I M E	:	6 0 . 0 s	

Press  Key in UVR screen, then it will exit this menu and convert to the upper menu.

Detail categories that can be set in UVR are as follows.

【Table 6.4】 UVR Menu

Category	Range	Setting Unit	Default Value	Description
CURVE	OFF, NI, DT	-	NI	Set OFF, Inverse Time, Definite Time
PICK-UP	30 ~ 105V	1V	90V	Definite Time Pickup Value
T-DIAL	0.1 ~ 10.0	0.1	10.0	Set Time Ratio
DT-TIME	0.04 ~ 60.00Sec	0.01Sec	-	Set the time of Definite Time
OP_MODE	DIGITAL, INDUCTION	-	DIGITAL	Set Operation Mode
RST_MODE	OFF, ON	-	OFF	Set Operation Recovery
RST_TIME	0.1 ~ 180.0s	0.1s	-	Set Operation Recovery time

- OP_MODE setting category has INDUCTION mode that has the existing induction type operation characteristic, and DIGITAL mode that only operates when the voltage goes above the setting value and drops under the setting value.
- RST_MODE setting category is a function that automatically recovers the UnderVoltage element operation after the set time(RST_Time) when the UnderVoltage is maintained continuously after the UnderVoltage accident. For example, if the UnderVoltage element is installed at the end of the circuit breaker, after the accident, the circuit breaker operates and the voltage at the latter part of the circuit breaker becomes 0V. That is, it is hard to insert the circuit breaker because the UnderVoltage element keeps operating. In this circumstance, RST_MODE function automatically recovers the UnderVoltage element after the set time(RST_Time), and makes the insertion of the circuit breaker easy. Setting "OFF" of RST_MODE means not using this function.

6.2.3 Self-Diagnosis Screen

This menu displays the result of the self-diagnosis function for each diagnosis category.


Diagnosis categories are control power, CPU WatchDog Timer, memory, and setting value, and if a fault occurs for each category, "FAIL" is displayed, and "System Error!" is displayed in the default LCD screen instead of "System OK!", and Error LED is lighted red.

Self-Diagnosis Screen is as follows.

```


1 . P o w e r   F a i l       : F A I L *
2 . C P U     W a t c h d o g :   O K
3 . M e m o r y           :   O K
4 . S e t t i n g         :   O K

```

Press  Key in self-diagnosis screen, then it will exit this menu and convert to the upper menu.

6.2.4 RS-485 Comm. Setting


It is a category to set the communication setting, and it can set Baudrate and Slave Addr.

Selecting() 4. RS-485 Comm. category in Setting will display the following screen.

```

- >   R S - 4 8 5   C o m m .
1 . P r o t o c o l       : M o d B u s *
2 . B a u d r a t e       : 1 9 2 0 0
3 . S l a v e   A d d r :           1


```

Press  Key in RS-485 Comm. screen, then it will exit this menu and convert to the upper menu.

【Table 6.5】 RS-485 Comm. Setting


Category	Range	Default Value	Description
Protocol	MODBUS	MODBUS	Communication Protocol
Baudrate	300, 600, 1200, 2400, 4800, 9600, 19200 (bps)	19200	Set the communication speed
Slave Addr	1~254	1	Set Slave Addr

6.2.5 System Config. Setting

System Config. has detail categories of Power system, T/S Output, and Password. Selecting()5. System Config. category in Setting will display the following screen.


```

- >   S y s t e m   C o n f i g .
1 . P o w e r   S y s t e m           *
2 . T / S   O u t p u t
3 . P a s s w o r d
    
```

Press  Key in System Config. screen, then it will exit this menu and convert to the default screen of Setting.


6.2.5.1 System Config. ► Power system Setting

Power system has detail categories of FREQ(frequency) and P_PT_RAT, P_CT_RAT

Selecting() 1. Power system category in System Config. will display the following screen.

```

- >   P o w e r   S y s t e m
1 . F R E Q           :           6 0 H z *
2 . P _ P T _ R A T :           1 . 0 : 1
3 . P _ C T _ R A T :           5 : 5
    
```

Press  Key in Power system screen, then it will exit this menu and convert to the upper menu.

- **System Config. ► Power system ► FREQ Setting**

It is a category to set the common frequency used in the system where the relay is used.

There are two categories, 50Hz and 60Hz, and for cable using 60Hz, select 60Hz.

- **System Config. ► Power system ► P_PT_RAT Setting**

It is a category to set the Phase side 1st voltage ratio. It can be set in the units of 0.1 from 0.1 to 3200.0. For example, if the voltage in Phase side uses 22900:11, then set to 208.2 in P_PT_RAT setting.

- **System Config. ► Power system ► P_CT_RAT Setting**

It is a category to set the 1st CT ratio on Phase side. It can be set in 5 units from 5 to 10000. This relay is designed for CT 2nd rated to be 5A, so CT with 5A 2nd must be selected when selecting CT. For example, if using CT of Phase side as 1000:5, set 1000 in P_CT_RAT setting.



6.2.5.2 System Config. ► T/S Output Setting

Connection types and recovery delay time for 7 output connections can be set in T/S Output.

Select 2. T/S Output category in System Config., then the following screen appears.

```

- >   T / S   O u t p u t
1 . T / S 1 *
2 . T / S 2
3 . T / S 3
4 . T / S 4
5 . T / S 5
6 . T / S 6
7 . T / S 7
    
```

To set the desired T/S, press ,  Key to move (*) symbol to the desired category.

• System Config. ► T/S Output ► T/S 1 Setting


It is a category that can set the connection type, recovery method, and recovery delay time, etc. for 7 output connections in T/S Output.

Select 1. T/S 1 category in T/S Output, then the following screen appears.

```

- >   T / S   1
1 . C O N   :           P R O T _ O R *
2 . R S T   :           S E L F
3 . D L Y   :           0 . 0 0 s
    
```

T/S 1 in the above screen means No. 1 output connection.

Press  Key in T/S 1 screen, then it will exit this menu and convert to the upper menu.

• System Config. ► T/S Output ► T/S 1 ► 1.CON Setting

It is a category to select in which condition to operate the output connection.

The types and meanings to connect output connection are as follows.



【Table 6.6】 T/S Connection Menus

Connection	Description
OFF	Connection not used.
PROT_OR	Output if any one of the relay element is in operation among all elements.
IOCR	Output if instantaneous overcurrent element is in operation.
TOCR	Output if time overcurrent element is in operation.
OVR_OR	Output if OverVoltage element is in operation.
UVR_OR	Output if UnderVoltage element is in operation.
OCR_OR	Output if instantaneous and time overcurrent element is in operation.
OCR+OVR	Output if any one of overcurrent element and overvoltage element is in operation.
OCR+UVR	Output if any one of overcurrent element and undervoltage element is in operation.
OVR+UVR	Output if any one of overvoltage element and undervoltage element is in operation.

• **System Config. ▶ T/S Output ▶ T/S 1 ▶ 2.RST Setting**

It is a category to set which method should be used when the output connection is recovered after the operation.

This relay has two methods, Self Mode and Manual Mode.

Self Mode is a function that the relay is automatically recovered after the operation, and Manual Mode is a function that the relay is not automatically recovered, but manually recovered. That is, it is not recovered until the user presses Reset () Key, and is recovered when the Reset () Key is pressed.

• **System Config. ▶ T/S Output ▶ T/S 1 ▶ 3.DLY Setting**

It is a category that can add to the recovery delay time on the recovery.

This menu is only applied when it is in Self Mode in the above 2. RST Setting, and is not applied if it is in Manual Mode.

If DLY is set to 0.00, it recovers within 40ms, and if you want the recovery within 100ms, set it to be 0.06.

It can be set in the units of 0.01Sec from 0.00 to 60.00, and it recovers with the error ratio of $\pm 35\text{ms}$ if under 100ms, and the error ratio of $\pm 5\%$ if 100ms or more.


6.2.5.3 System Config. ► Password Setting

It is a category to change the Password Setting, and the password is set as 4 digits using the numbers from 0 to 9.

Select 3.Password category in Config., then the following screen appears.


```

- > P a s s w o r d
  N e w P a s s w o r d : * * * *
    
```

From this screen, input new password, and press ENTER () Key, then the screen to input password again appears as follows.


```

- > P a s s w o r d
  N e w P a s s w o r d : * * * *
  C f m . P a s s w o r d : * * * *
    
```

From this screen, input password again, and press ENTER () Key, then the following screen appears, and it converts to the upper menu.

```

- > P a s s w o r d <
  N e w P a s s w o r d : * * * *
  C f m . P a s s w o r d : * * * *
  P a s s w o r d C o n f i r m e d
    
```

If you don't want to change password in Password Screen, press  Key, then it will exit from this menu and convert to the upper menu.


6.2.6 Recorder

Recorder category displays the fault content and the number of faults.

Select 6. Recorder in Setting, then the following screen appears.

```

- > F a u l t R e p o r t
  1 . D i s p l a y F a u l t s *
  2 . C l e a r F a u l t
     3 F a u l t !
    
```



Press  Key in Test Screen, then it will exit this menu and convert to the default screen of Setting.


6.2.6.1 Recorder ► 1.Display Fault Screen

Display Fault Screen displays the recent fault record. If a new fault occurs, the old record is erased and the new fault is stored.

Select 1.Display Fault category in Recorder, then the following screen appears.

- >	D i s p l a y		F a u l t s	
1 .	C o u n t e r	:	2	*
2 .	E l e m e n t	:	T O C R _	A
3 .	T i m e	:	9 . 6 0	s
4 .	I a	:	1 2 . 0 0	A
5 .	I c	:	3 . 6 1	A
6 .	V a b	:	1 0 9 . 8	V
7 .	V b c	:	1 1 0 . 0	V
8 .	V c a	:	1 0 9 . 9	V

To view fault record from the above screen, press ,  Key to view the detail categories such as accumulated number of operation, current, operating element, and relay operation time, etc.




Press Display  Key in Fault Screen, then it will exit this menu and convert to the upper menu.

6.2.6.2 Recorder ► 2.Clear Fault Category

This category can delete the stored Fault content.


Select 2.Clear Fault in Recorder, then the following screen appears.

- >	C l e a r F a u l t s			
	C l e a r	A l l	F a u l t s	?
	N o			

In the above screen, "No" flashes, and if you don't want to delete the fault record stored, press  Key, and if you want to delete the fault record, press  Key to change "No" to "Yes", and press ENTER () Key.

6.2.7 Test

You can test Front Display(Panel), Connection Output, etc. in Test category.
 Select 7. Test in Setting, then the following screen appears.

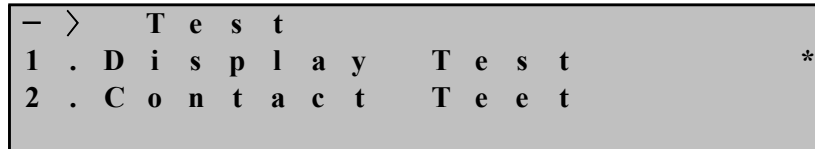


Press Key in Test Screen, then it will exit this menu and convert to the default screen of Setting.

6.2.7.1 Test ► Display Test

This menu is a category that can check the condition of LCD and LED on the relay front side.


Select 1.Display Test in Test, then the following screen appears.

If you don't want the Display Test in the Display Test Screen, press Key, then it will exit this menu and convert to the upper menu.

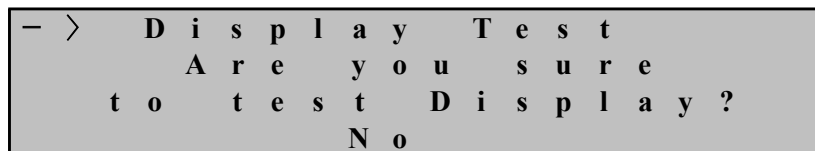

To perform Display Test, press Key from this screen to change “No” to “Yes”, and press ENTER () Key, then TEST will flash 3 times on LCD, and all the LEDs flashes 3 times at the same time, then it will move to Test menu.

When performing Display Test, the following screen appears.

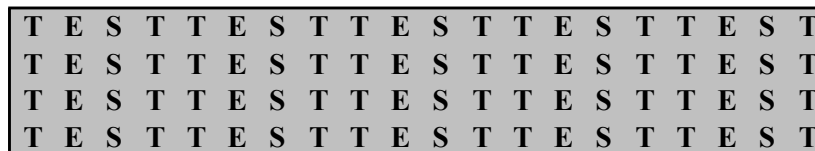






6.2.7.2 Test ► Contact Test


This menu is a category that can check the conditions of the connections by changing the connection outputs as desired.

Select 2. Contact Test in Test, then the following screen appears.

— >	C o n t a c t			T e s t		
1	.	T / S	1	:	O f f	*
2	.	T / S	2	:	O f f	
3	.	T / S	3	:	O f f	
4	.	T / S	4	:	O f f	
5	.	T / S	5	:	O f f	
6	.	T / S	6	:	O f f	
7	.	T / S	7	:	O f f	
8	.	H . A l a r m		:	O n	

To test T/S1 ~ T/S7 connections, after selecting() the desired connection, press  Key to change to On, and press ENTER () Key, then after the connection is activated, it recovers to off state with the sound of "Click".

To test Healthy Alarm connection, select() H.Alarm connection, press  Key to change to Off, and press ENTER () Key, then after the connection is activated, it recovers to On state with the sound of "Click".

Press  Key in Contact Test, then it will exit this menu and convert to the upper menu.


【Table 6.7】 Setting Menus

Default Screen Setting (Menu)	1. Measurements			Ia, Ic, Vab, Vbc, Vca
	2. Protection	1. Time OCR	1. Curve	OFF, NI, VI, EI, LI, DT, KNI, KVI
			2. PickUp	2.0~12.5A(0.1A Step)
			3. Time Dial	0.1~10.0(0.1Step)
			4. DT_Time	0.04~60.00Sec(0.01Sec Step)
		2. INST. OCR	1. Mode	OFF, INST, DT
			2. PickUp	10~90A(1A Step)
			3. DT_Time	0.04~60.00Sec(0.01Sec Step)
		3. OVR	1. Curve	OFF, NI, DT
			2. PickUp	65~170V(1V Step)
			3. Time Dial	0.1~10.0(0.1Step)
			4. DT_Time	0.04~60.00Sec(0.01Sec Step)
		4. UVR	1. Mode	OFF, NI, DT
			2. PickUp	30~105V(1V Step)
			3. Time Dial	0.1~10.0(0.1Step)
	4. DT_Time		0.04~60.00Sec(0.01Sec Step)	
	5. OP_MODE		DIGITAL, INDUCTION	
	6. RST_MODE		ON, OFF	
	7. RST_TIME		0.1~180.0Sec(0.1Sec Step)	
	3. Self-Diagnosis			Power Fail, CPU Watchdog, CPU Memory, Setting
	4. RS-485 comm.	1. Protocol		MODBUS
		2. Baudrate		300, 600, 1200, 2400, 4800, 9600, 19200 (bps)
		3. Slave Addr		1~254
	5. System Config.	1. Power System	1. FREQ	50Hz or 60Hz
			2. P_PT_RAT	0.1~3200.0:1 (0.1 Step)
			3. P_CT_RAT	5~10000:5 (5 Step)
		2. T/S OutPut	1. T/S 1~7	1. CON
2. RST				SELF or MANUAL
3. DLY				0.00~60.00Sec (0.01Sec Step)
3. Password		New Password :****		
6. Recorder		1. Display Faults		Counter, Element, Time, Ia, Ic, Vab, Vbc, Vca
	2. Clear Faults		Clear All Faults? Yes or No	
7. Test	1. Display Test		Are you sure to Display Test? Yes or No	
	2. Contact Test		T/S 1~7,H.Alarm : on or off	

7. PC Software (SetGDRSeries)

As you change and verify various setting values, fault information, status indications, you can change and verify using PC on the site using this SetGDRSeries. Operate by connecting RS-232C communication port of PC and the RS-232C communication port of the front-side of the relay, and use MODBUS for the communication protocol. Also, RS-485 communication is possible by using the contact at the back. When you change the setting in the relay, you have to repeat changing for each category, but you can process at once using SetGDRSeries, and you can store the operation contents as a file, so it can perform the same operation in the future more easily. All the related operation data is stored as a file, and it can be retrieved.

The following is the default screen when SetGDRSeries is run.

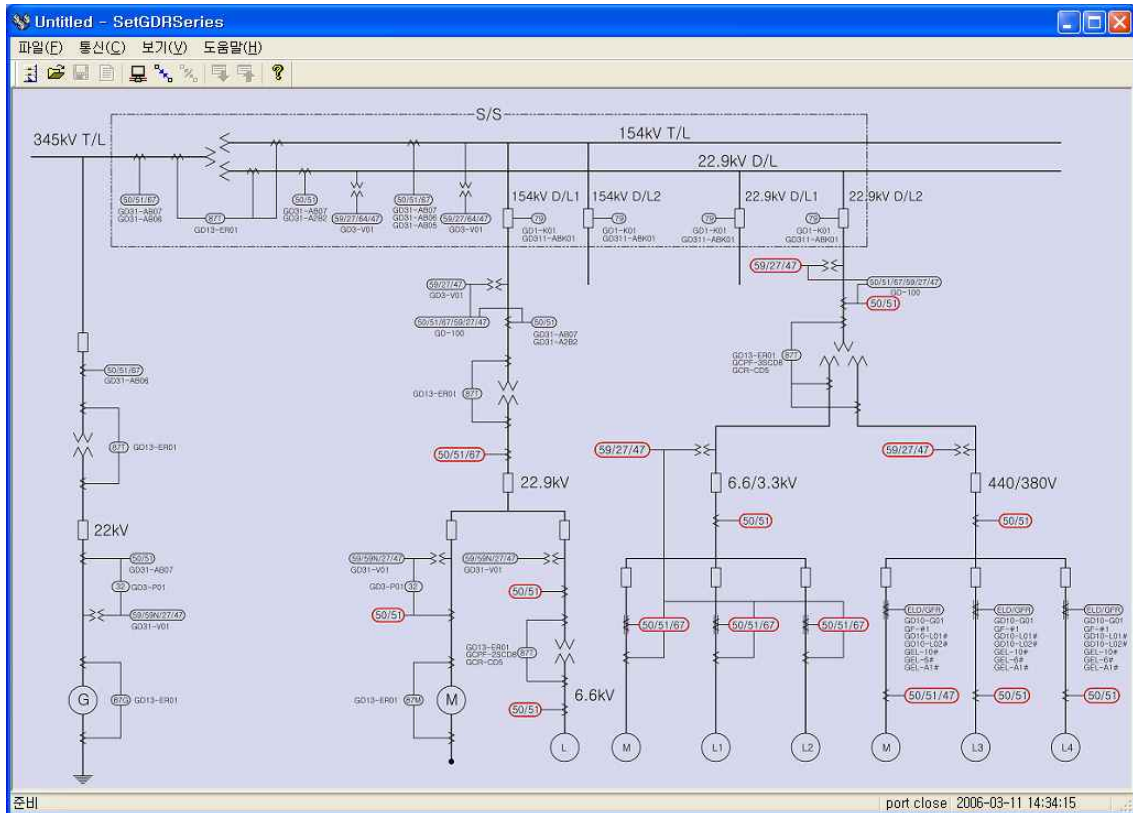

 





 


[Figure 7.1] SetGDRSeries Initial Display


7.1 Program Menu

The basic menu of SetGDRSeries is mainly divided to communication port setting menu, file input/output menu, and relay related setting menu, and please refer to **【Table 7.1】** for the details.

【Table 7.1】 SetGDRSeries Program Menus

● Program Menu	
 Comm	Selects the communication port of the computer. Refer to 7.3 Communication Port Setting
 Connect	Connects the communication between the ports of the relay and SetGDRSeries, and initializes.
 Disconnect	Closes the connection of the communication port.
 Device Selecting	Selects the relay to communicate with SetGDRSeries.
 Open	Reads the existing Setting file.
 Save	Stores Setting(System, Protection) contents.
 Report	Stores Setting(Relay Information, System, Protection, Fault) contents as a text file.
 PC → Relay	Transmits the System, Protection setting changes to the relay.
 Relay → PC	Bundle uploads the setting contents of the current relay to the SetGDRSeries.
Exit(X)	Exits the program.

7.2 Device Selecting

One SetGDRSeries program controls one GDR Series relay, and the relay to be controlled needs to be selected. Press Relay Select() button, and the window to select the relay appears as the following Figure, and selects the relay to be controlled remotely.

To communicate with GDR-ACD01, select GDR-ACD01, and press "OK" button.



【Figure 7.2】 Relay Selecting

7.3 Communication Port Configuration

This function select and use other Con-Port when the communication port is occupied by other device and not usable, and can select and use among 15 ports for the communication port. Also, since RS-232C communication protocol uses MODBUS, you can use RS-485 communication for SetGDRSeries.






 


【Figure 7.3】 Communication Port Setting

【Table 7.2】 Communication Port Configuration


• Communication		
Port	COM1 ~ COM15	
	Communication Port	
ADDR	1~254	Used for RS-485C communication
	Slave Address (MODBUS Protocol) for RS-485C	

7.4 Setting Update Screen

Select the relay in Relay Select() in SetGDRSeries menu, then the screen to select Setting, Status, Report category appears. From this, press Relay → PC () to verify the stored system configuration and Protection setting, and press PC → Relay () to input the current Setting screen contents to the relay. Also, press Save() to store the Setting screen contents as (*.gdr) file, and press Open() to load the stored file. Press Report() to store as (*.txt) file for easy production of reports.

7.4.1 Setting

Setting Screen sets the protection relay element and the categories related to the System Configuration of the relay. Setting categories are mainly composed of Time OCR(Time overcurrent relay element), Inst. OCR(Instantaneous overcurrent relay element), OVR(overvoltage relay element), UVR(undervoltage relay element) Power System, T/S Output and the description of each element is the same as menu screen, so please refer to "6. Display and Setting Mode".

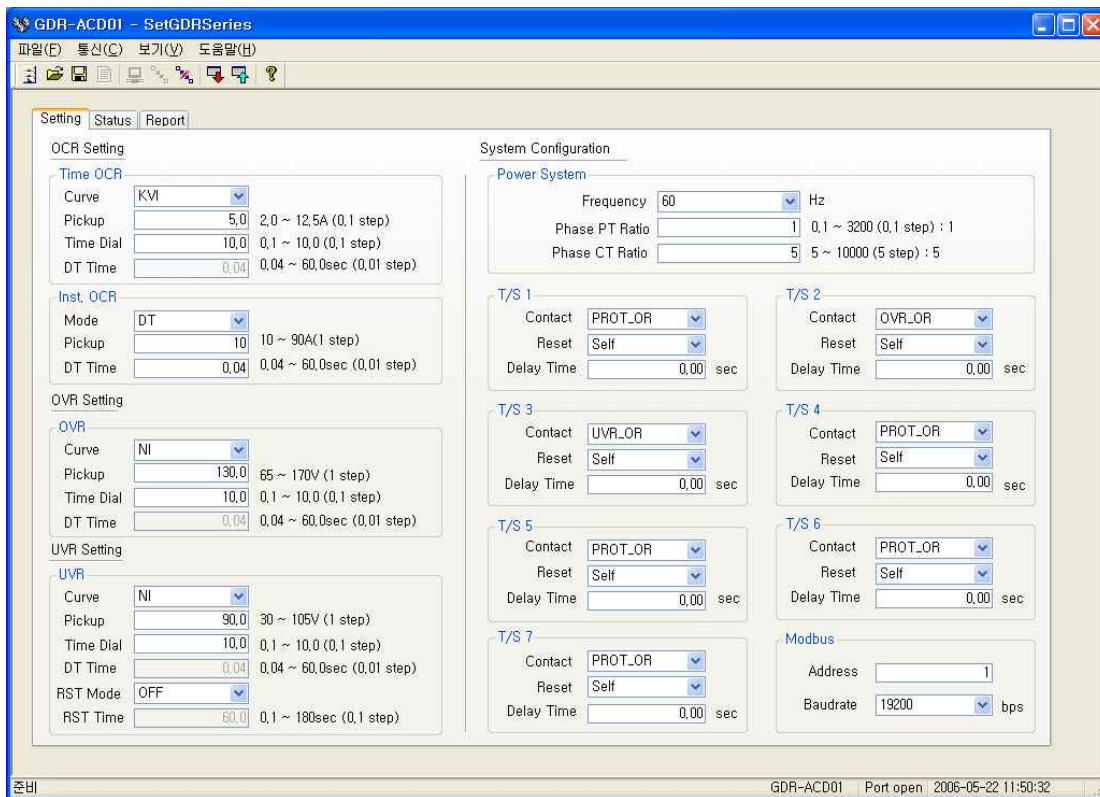


【Figure 7.4】 GDR-ACD01 Setting


7.4.2 Status

Status Screen is composed to view the categories that are displayed in the relay such as Current Measurement, Fault Record, State, etc. in one screen.

The description of this category is the same as the relay menu, so please refer to "6. Display and Setting Mode".

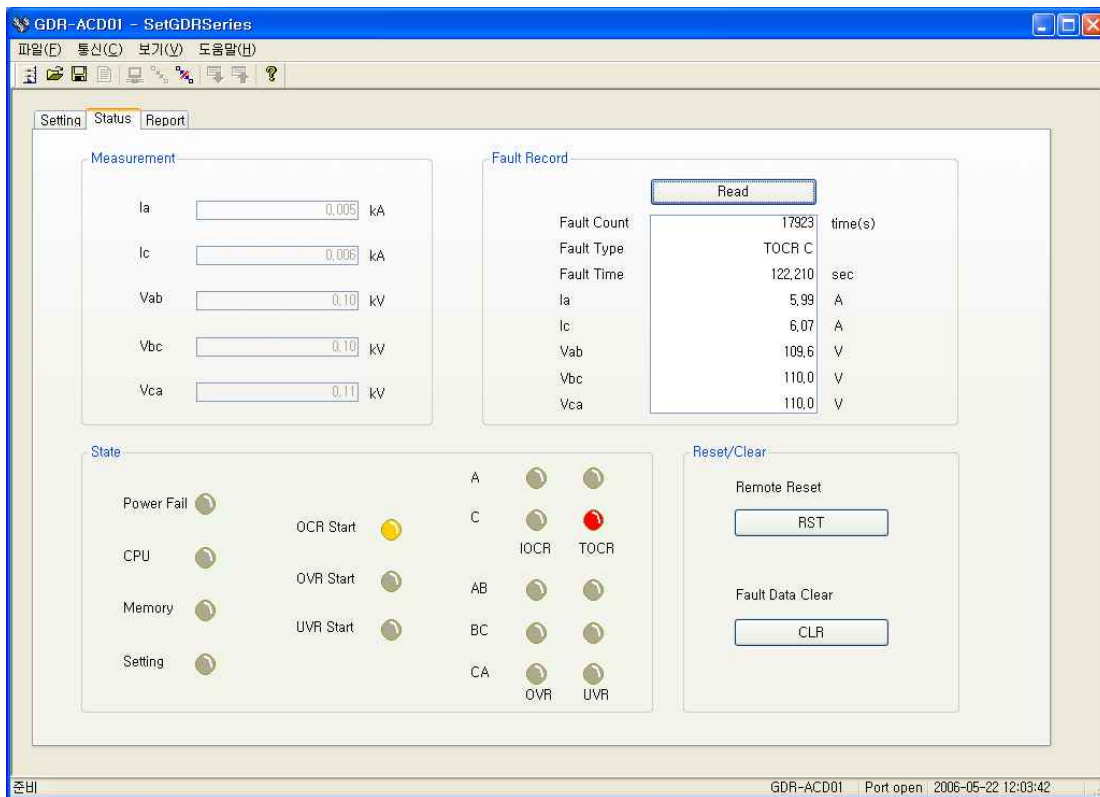


【Figure 7.5】 GDR-ACD01 Status

- SetGDRSeries Measurement unit is kA, kV.
- Click Read button, then it shows the last fault content stored in the relay.
- Click RST button, then the protection relay element among the **Reset** () **Key** functions of the relay operates, and when Operating Indicator is on, the operation of Indicator Reset can be done remotely at PC.
- Click CLR button, then the same function of **Recorder** ▶ **2.Clear Fault** category of the relay can be done remotely at PC.

7.4.3 Report


You can store and read the information(Relay Information, Setting Data, System Configuration, Fault Record) of the relay as txt file format through the communication between the relay and PC.

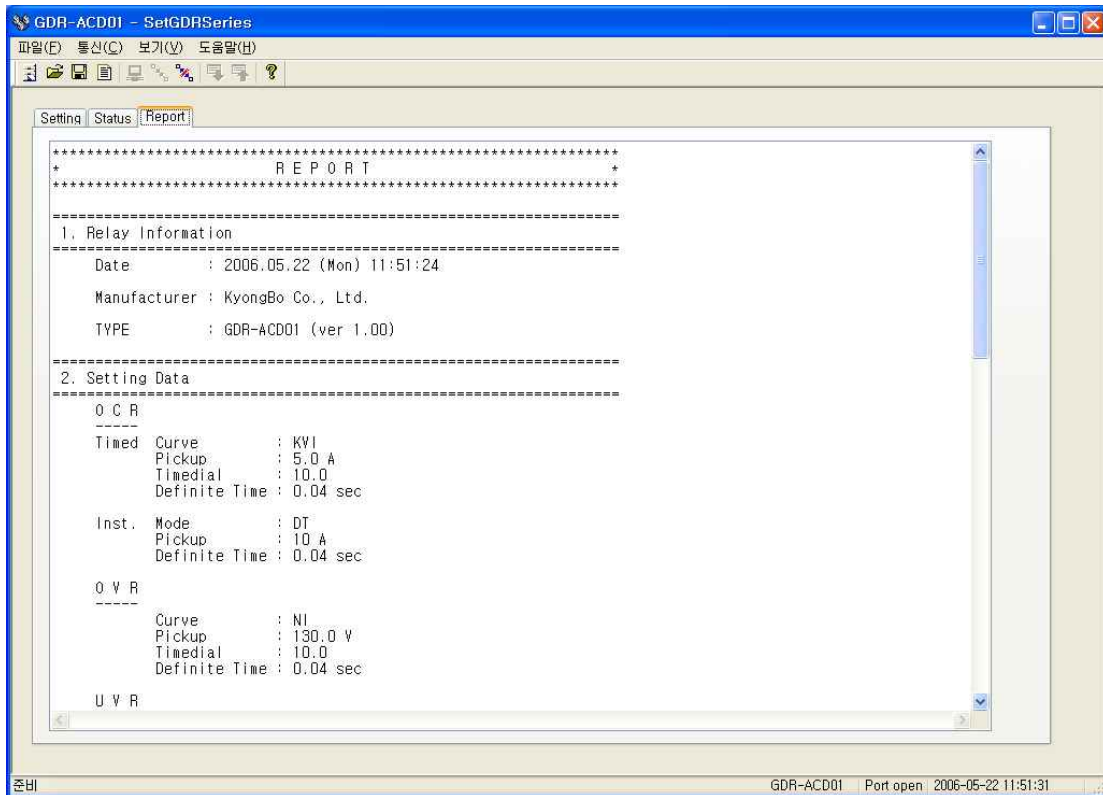

【Figure 7.6】 GDR-ACD01 Report

7.5 Help

You can find the description of Setting Tool functions, technical assistance(A/S), company's homepage, mail address, address, and phone numbers, etc.

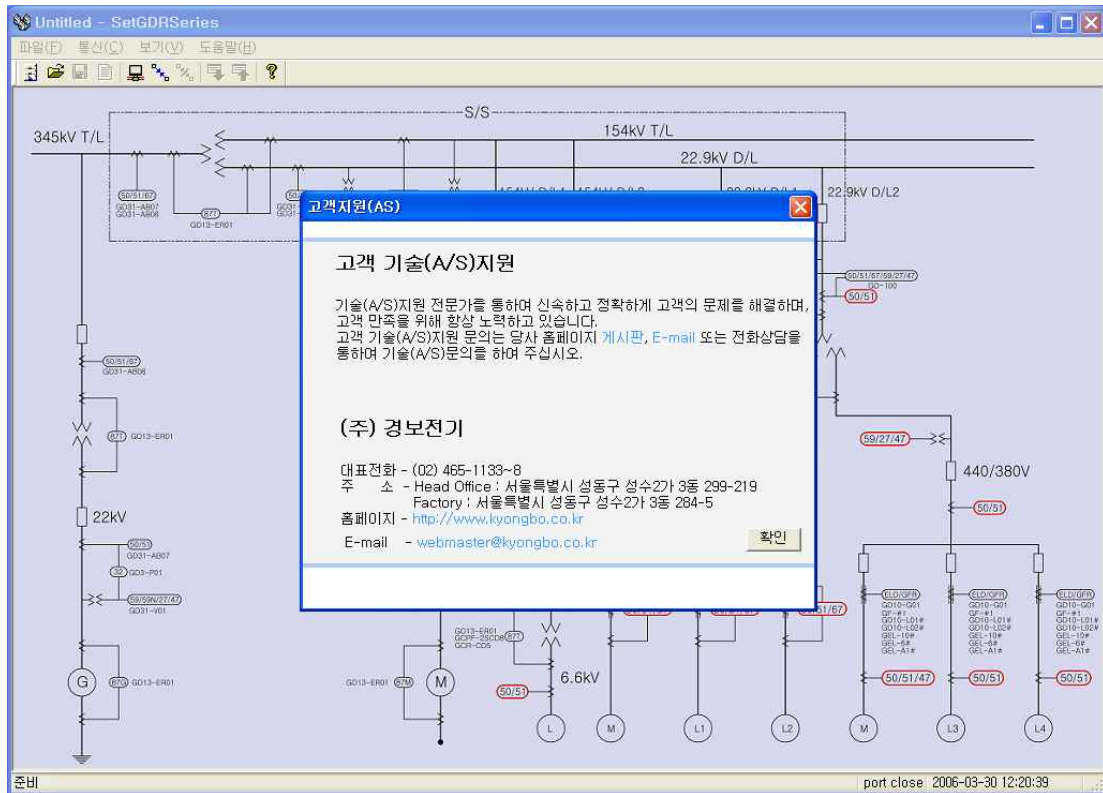


[Figure 7.7] Help


Appendix 1. Factory Default Setting Values

Default Screen Setting (Menu)	1. Protection	1. Time OCR	1. Curve	KVI	
			2. PickUp	5A	
			3. Time Dial	10	
			4. DT_Time	–	
		2. INST. OCR	1. Mode	DT	
			2. PickUp	50A	
			3. DT_Time	0.04Sec	
		3. OVR	1. Curve	NI	
			2. PickUp	130V	
			3. Time Dial	10	
			4. DT_Time	–	
		4. UVR	1. Mode	NI	
			2. PickUp	90V	
	3. Time Dial		10		
	4. DT_Time		–		
	5. OP_MODE		DIGITAL		
	6. RST_MODE		OFF		
	7. RST_TIME		–		
	2. RS-485 comm.	1. Baudrate		19200[bps]	
		2. Slave Addr		1	
	3. System Config.	1. Power System	1. FREQ		60Hz
			2. P_PT_RAT		1:1
			3. P_CT_RAT		5:5
		2. T/S OutPut	1. T/S1	1. CON	PROT_OR
				2. RST	SELF
				3. DLY	0.00Sec
			2. T/S2	1. CON	IOCR
				2. RST	SELF
				3. DLY	0.00Sec
			3. T/S3	1. CON	TOCR
				2. RST	SELF
				3. DLY	0.00Sec
		4. T/S4	1. CON	OVR	
2. RST			SELF		
3. DLY			0.00Sec		
5. T/S5		1. CON	UVR		
		2. RST	SELF		
		3. DLY	0.00Sec		
6. T/S6		1. CON	IOCR+TOCR		
		2. RST	SELF		
		3. DLY	0.00Sec		
7. T/S7		1. CON	OVR+UVR		
		2. RST	SELF		
	3. DLY	0.00Sec			
3. Password		0000			


Appended 1. Dimensioned Drawings Unit : mm

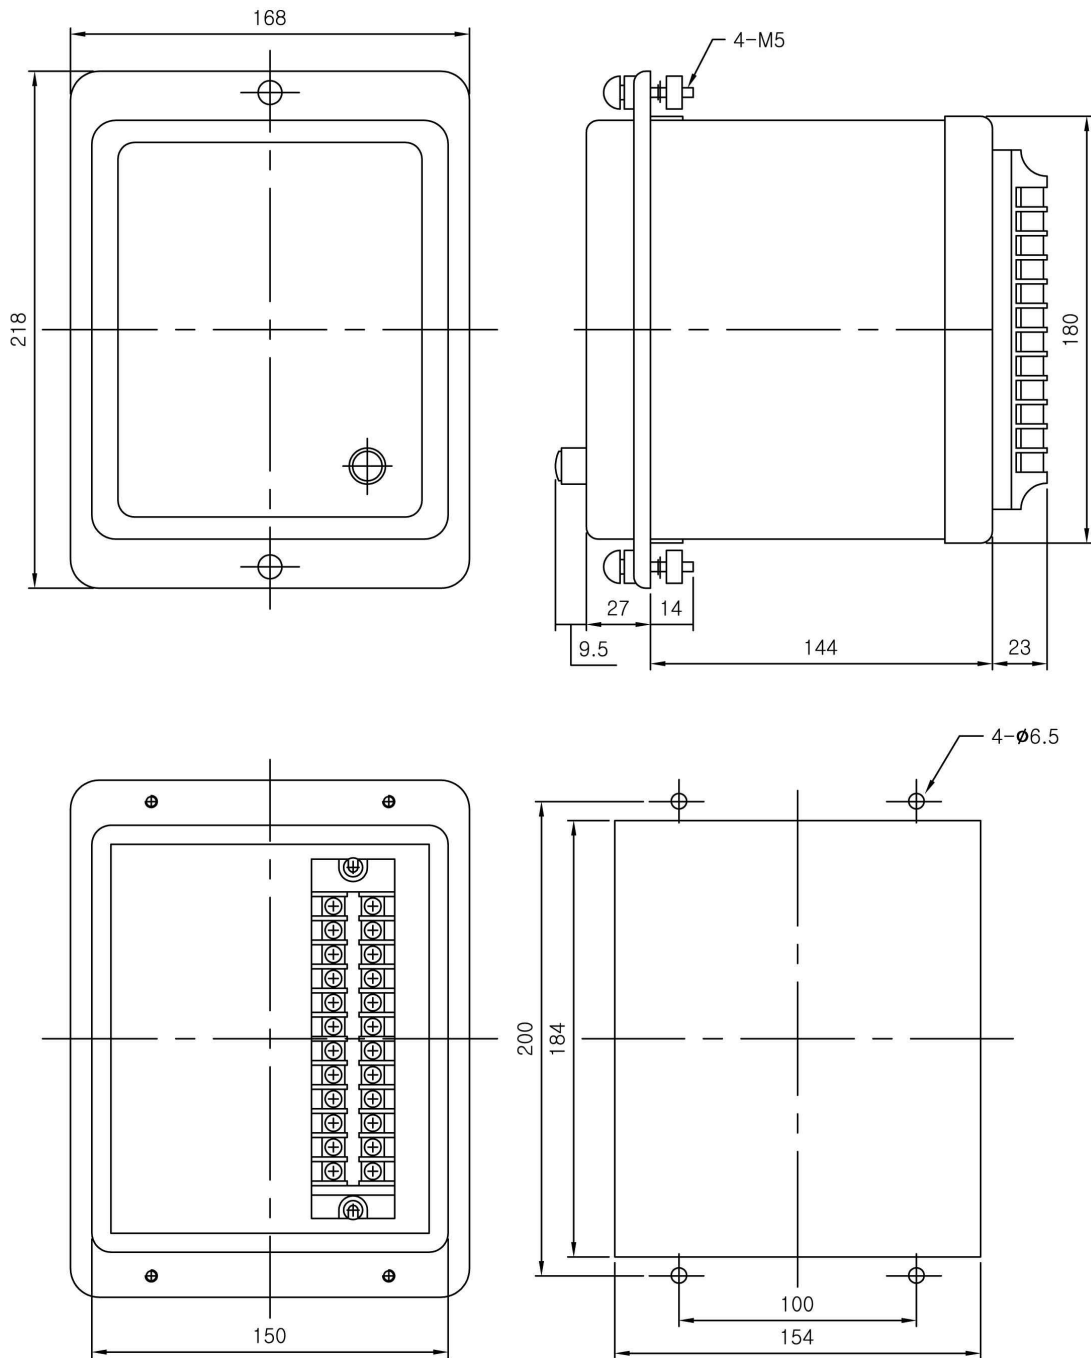

Appended 2. Internal Block Diagram

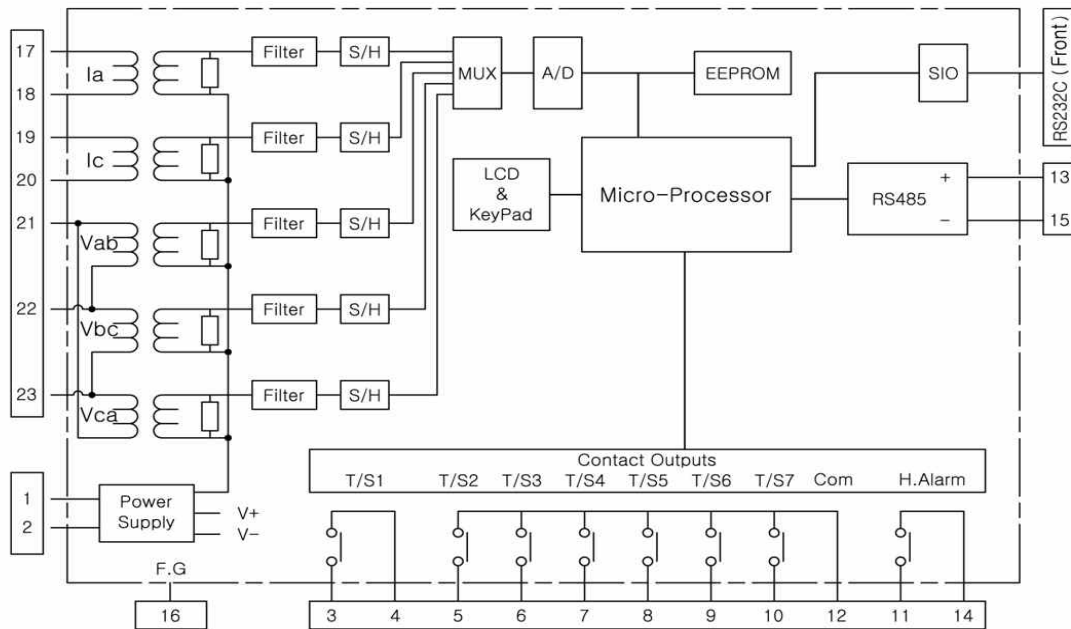


Appended 3. External Connection Diagram

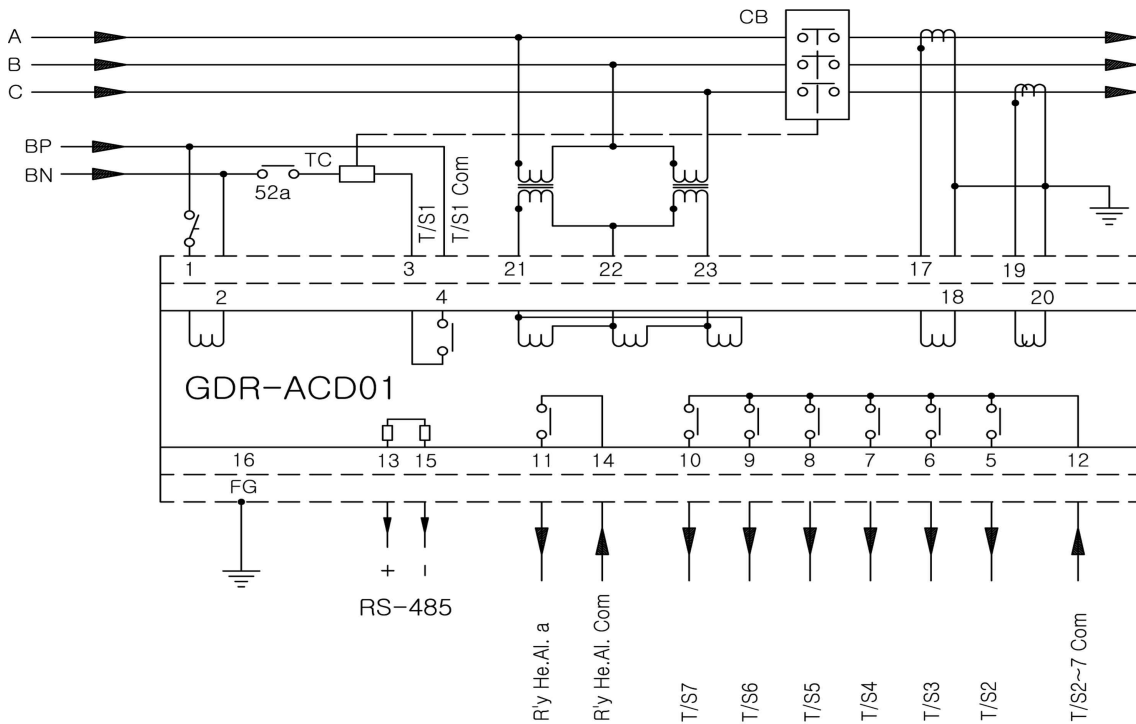


- * Cation : 1) External connection diagram is example.
 2) R'y.He.AI contact out status is normal
 when apply aux. power


Appended 4. Inverse Time Characteristic Curve

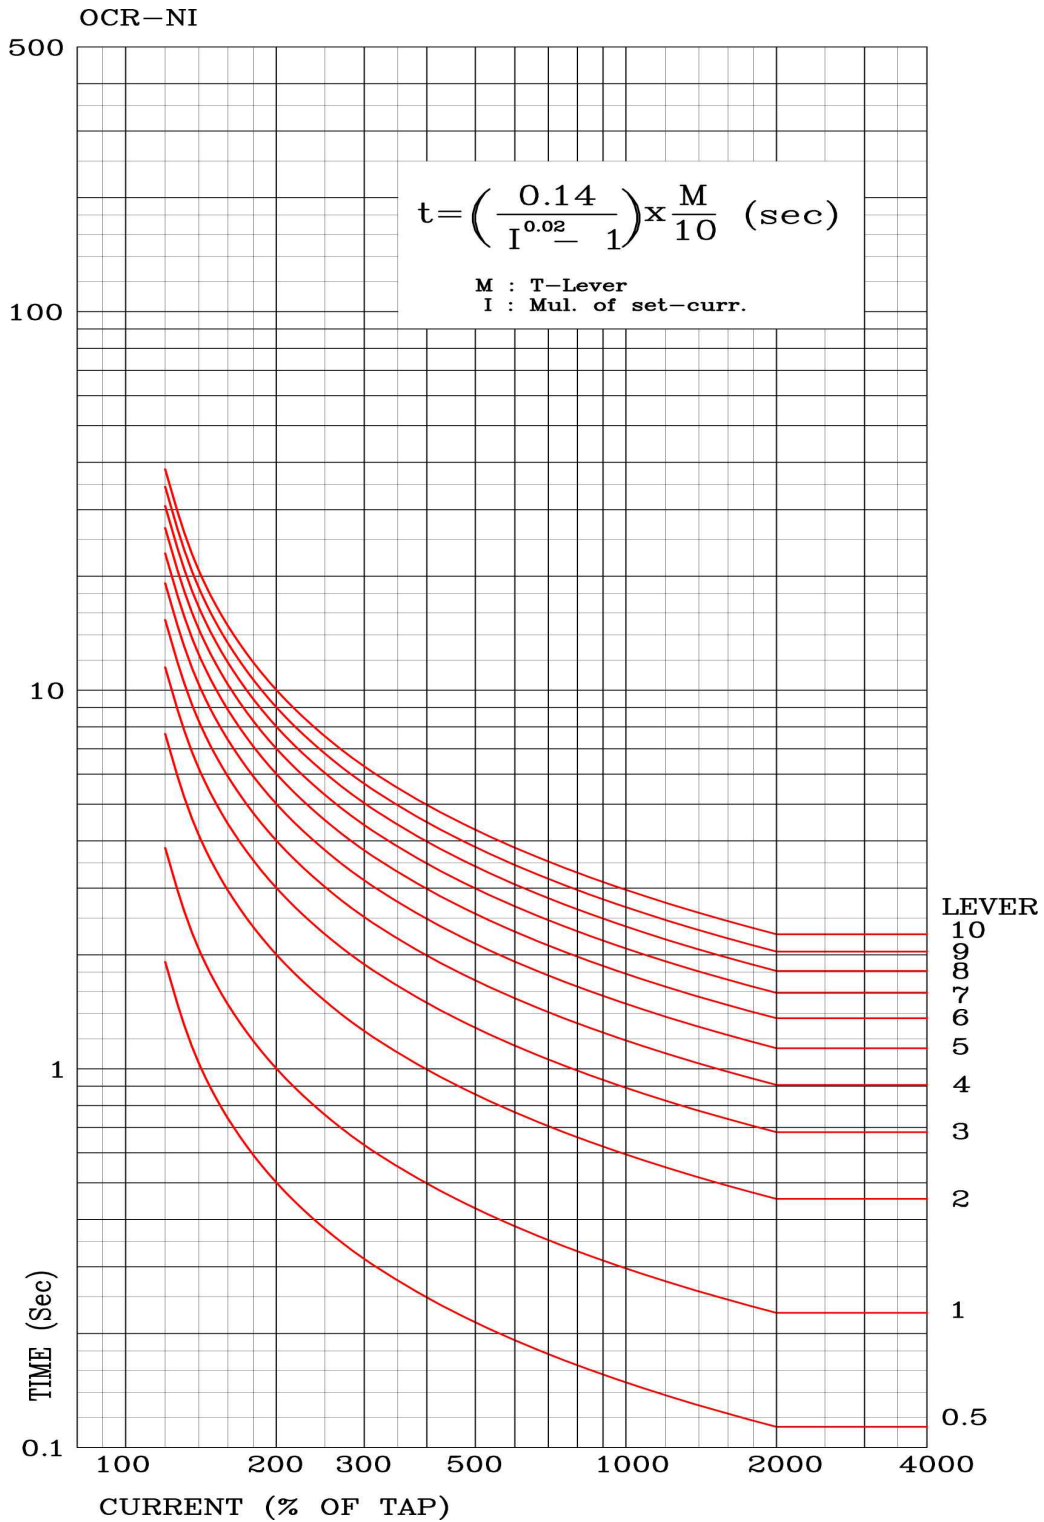


Appended 5. Very Inverse Time Characteristic Curve

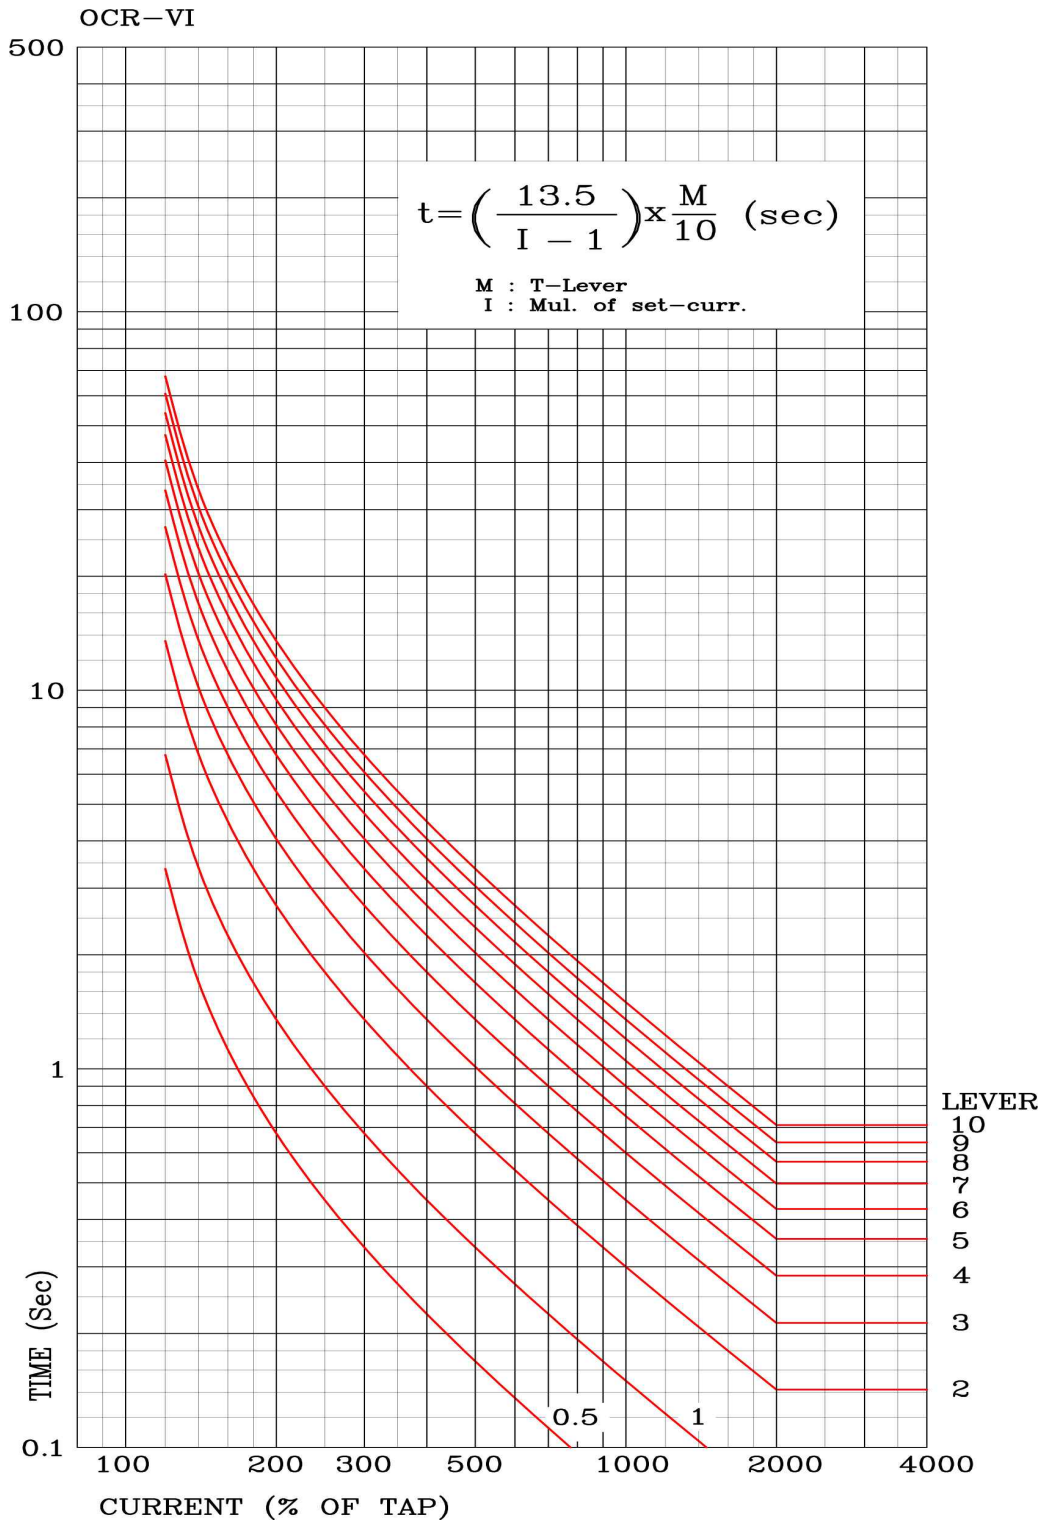


Appended 6. Extreme Inverse Time Characteristic Curve

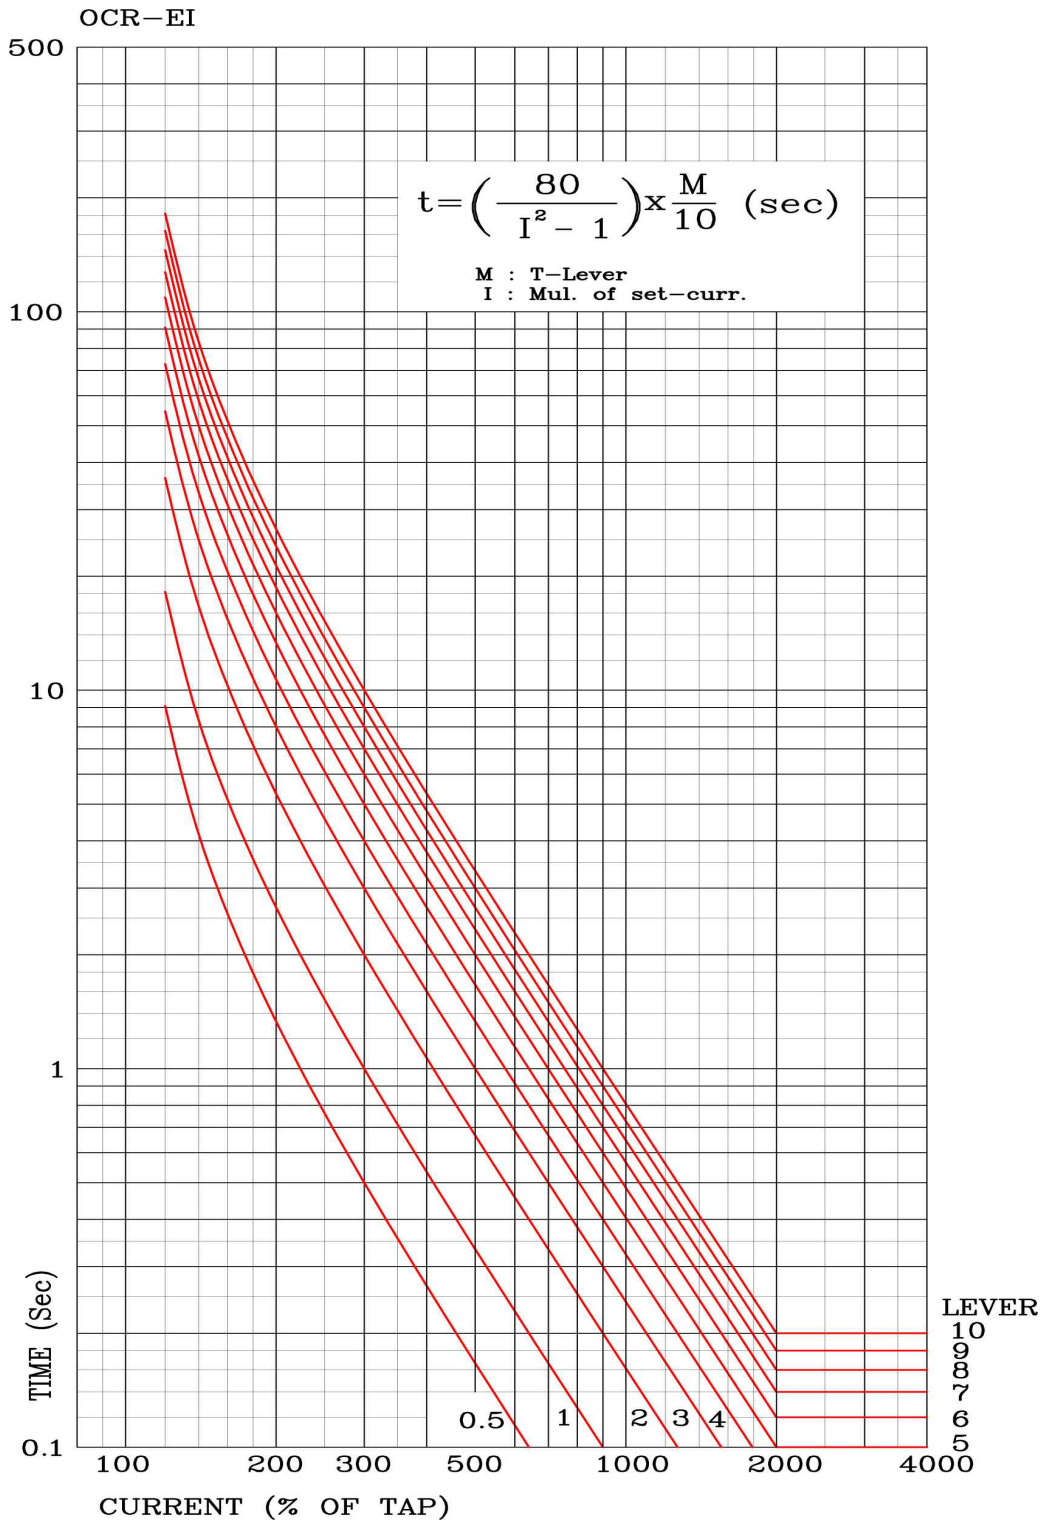


Appended 7. Long Inverse Time Characteristic Curve

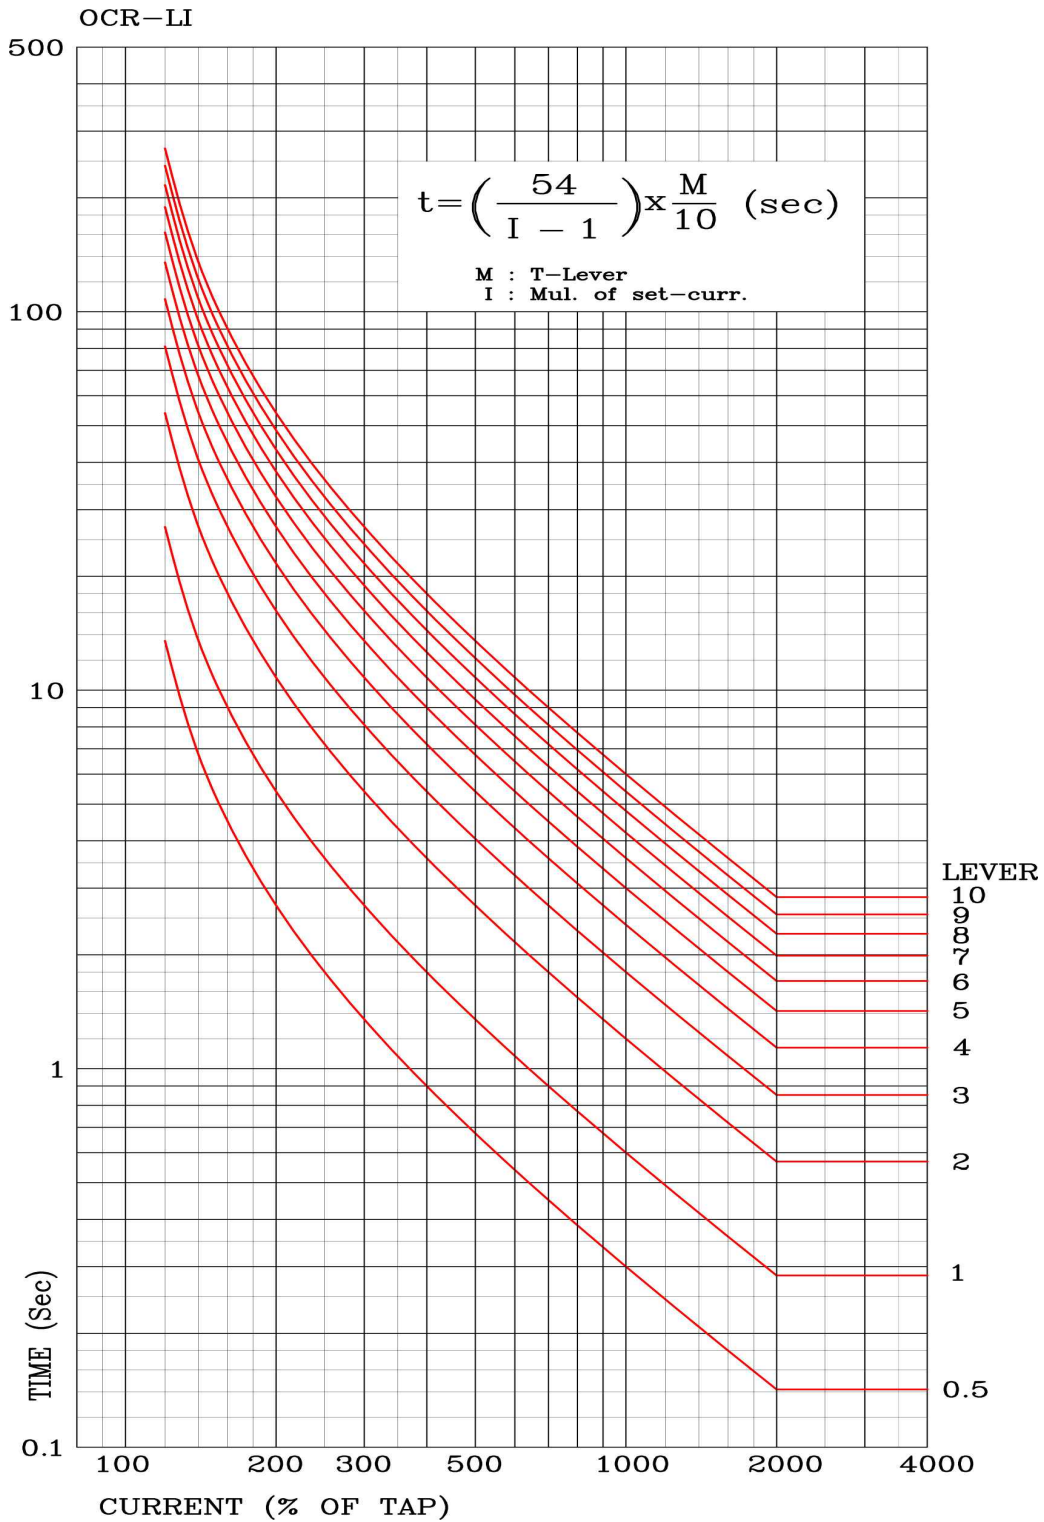


Appended 8. Kyongbo Induction Type Inverse Time (KEPCO Type) Characteristic Curve

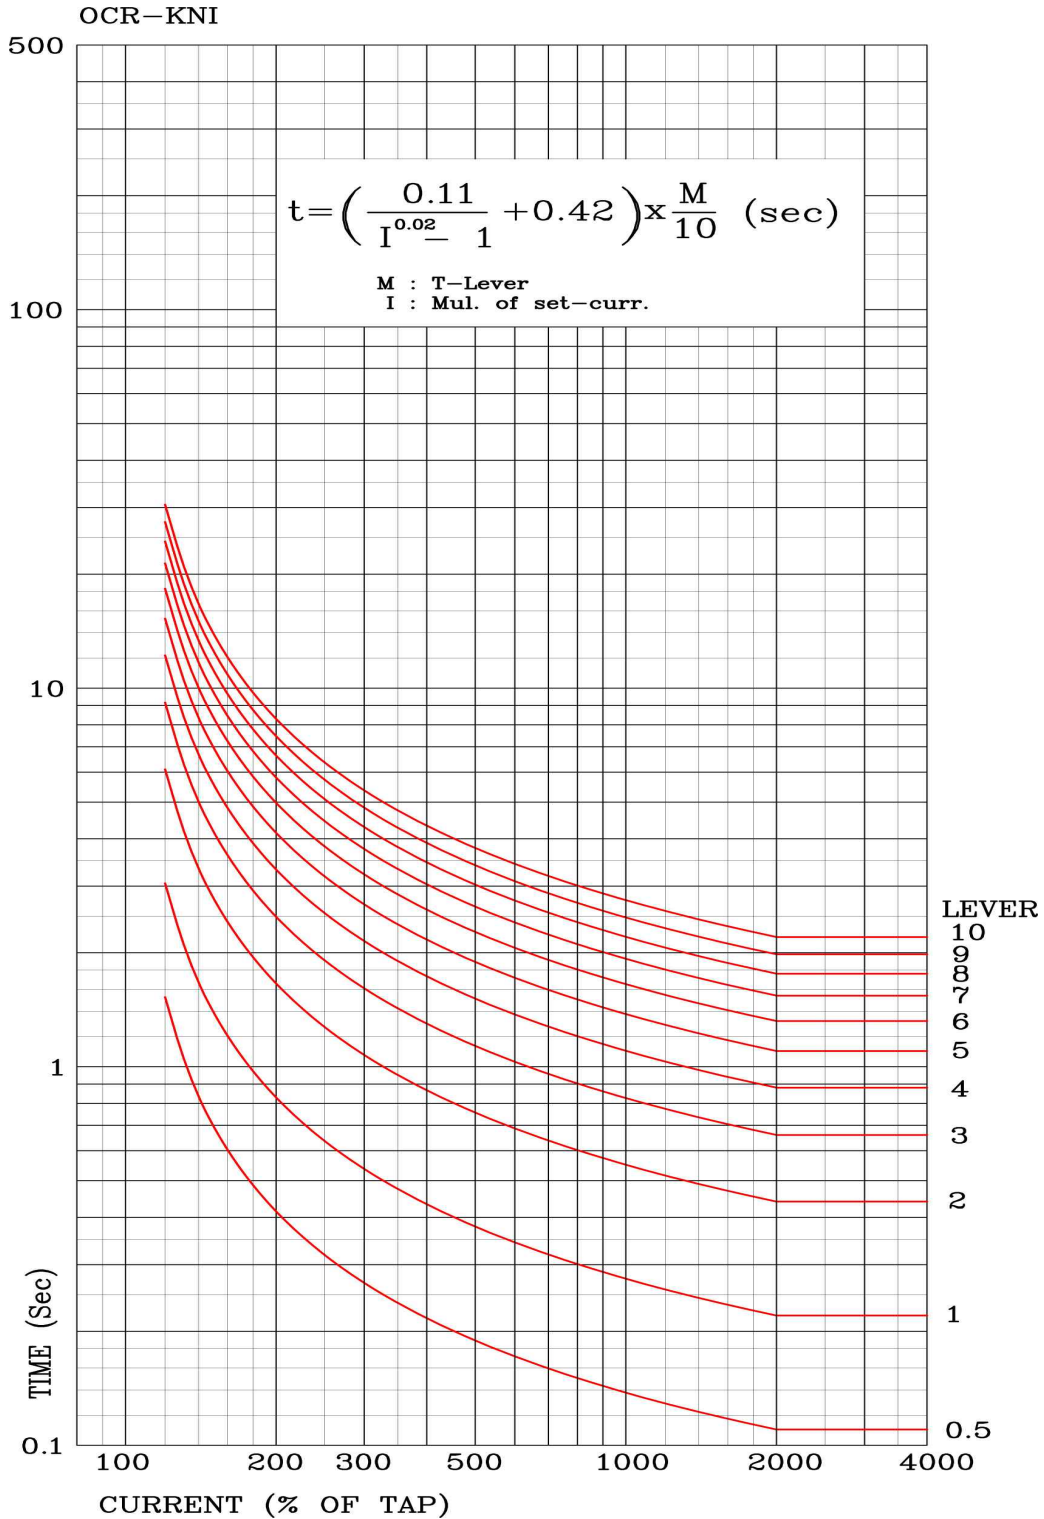


Appended 9. Kyongbo Induction Type Very Inverse Time (KEPCO Type) Characteristic Curve

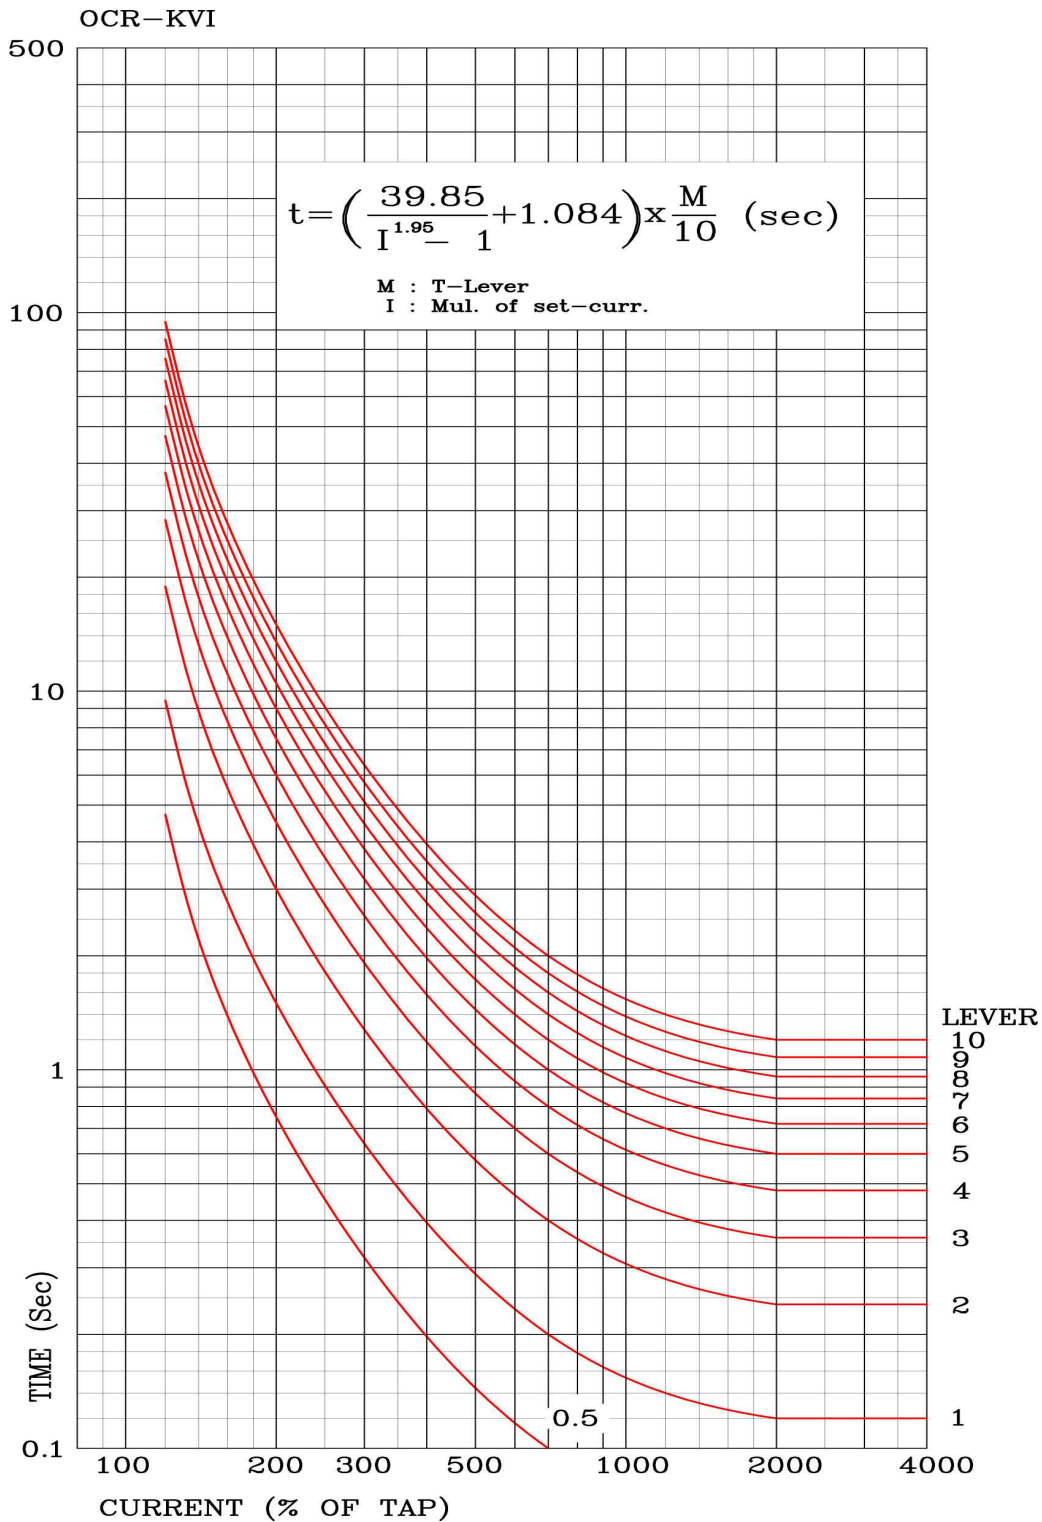


Appended 10. Definite Time Characteristic Curve

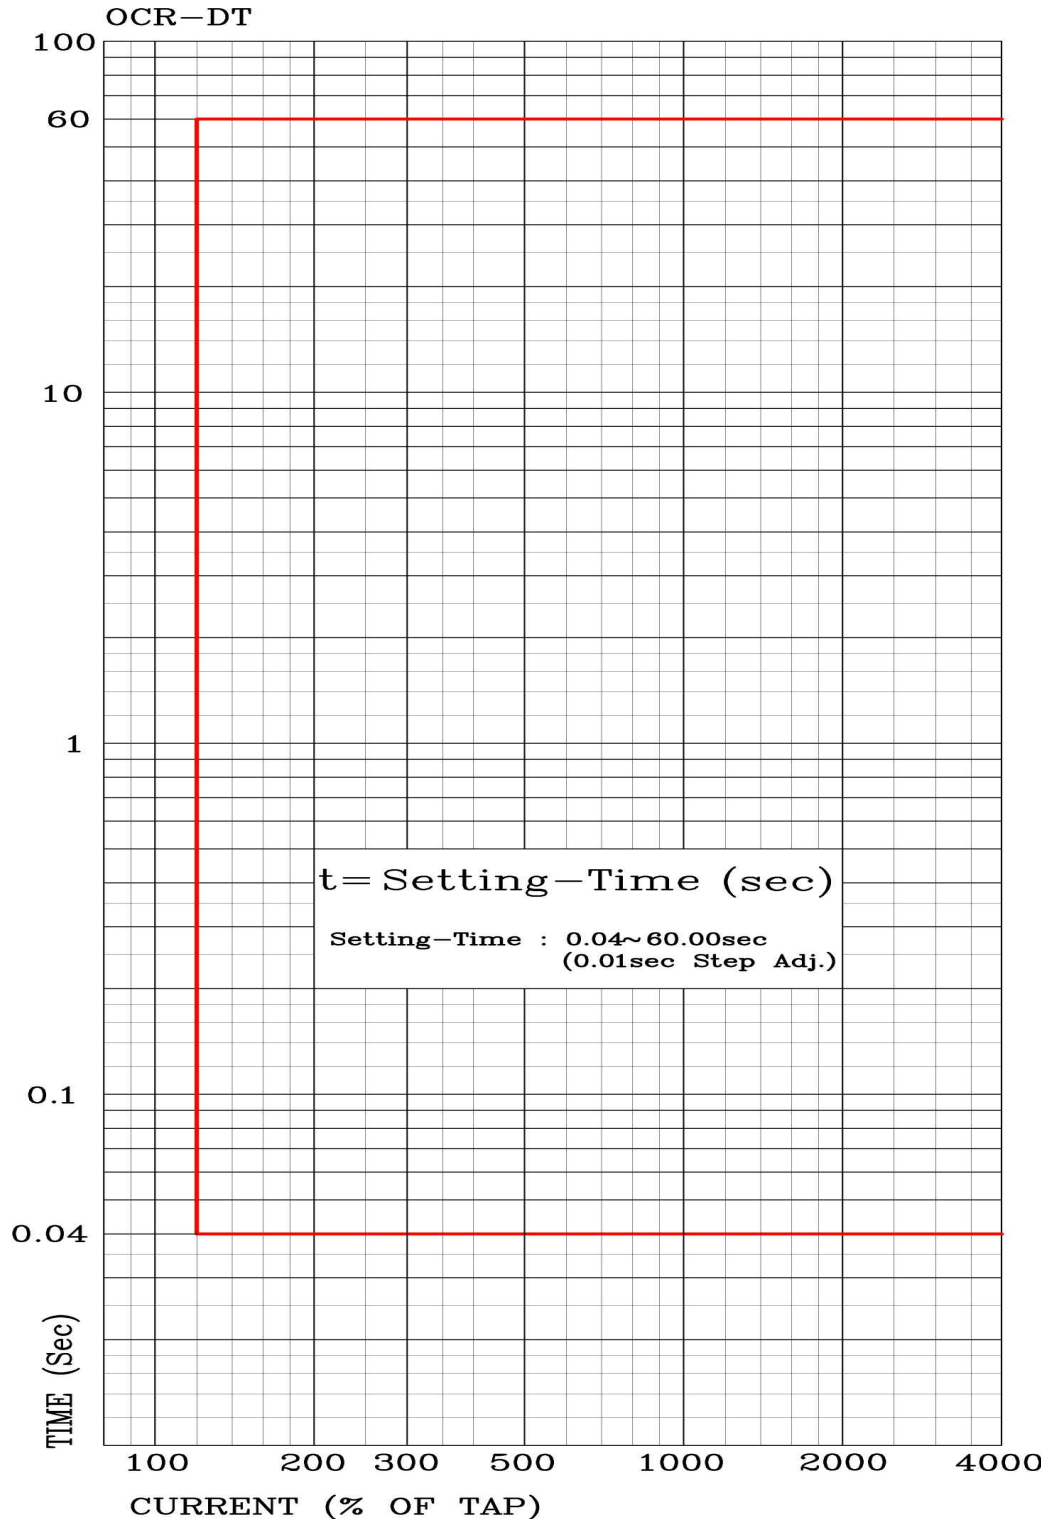


Appended 11. OverVoltage Element Inverse Time Characteristic Curve

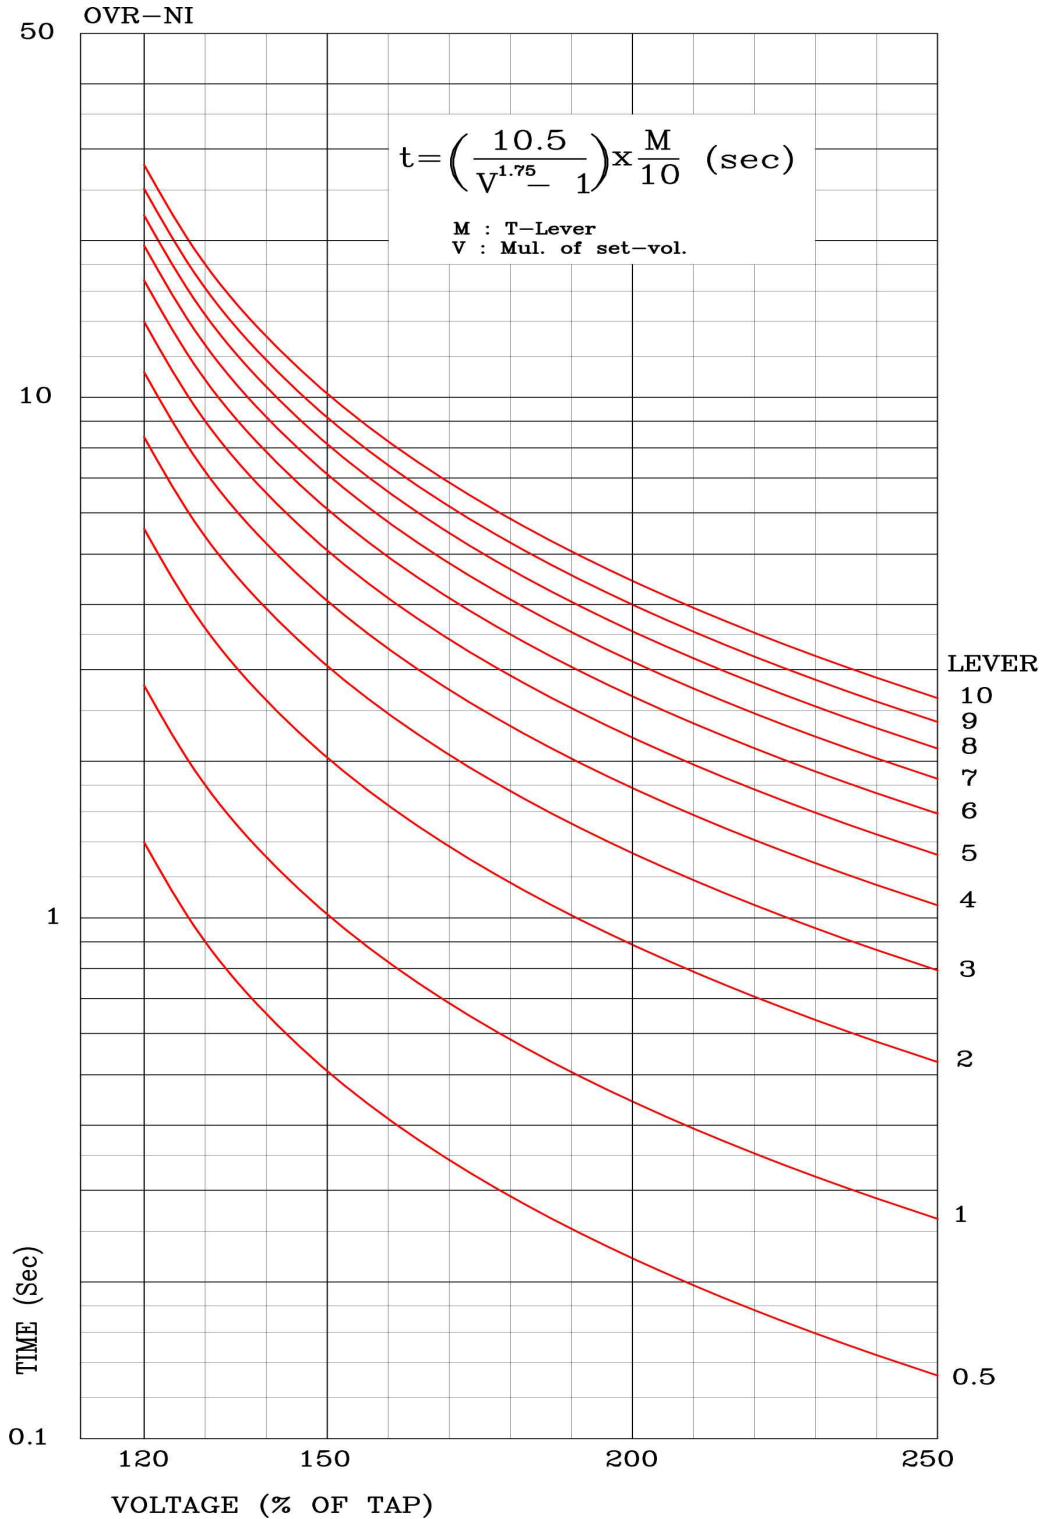

Appended 12. OverVoltage Element Definite Time Characteristic Curve

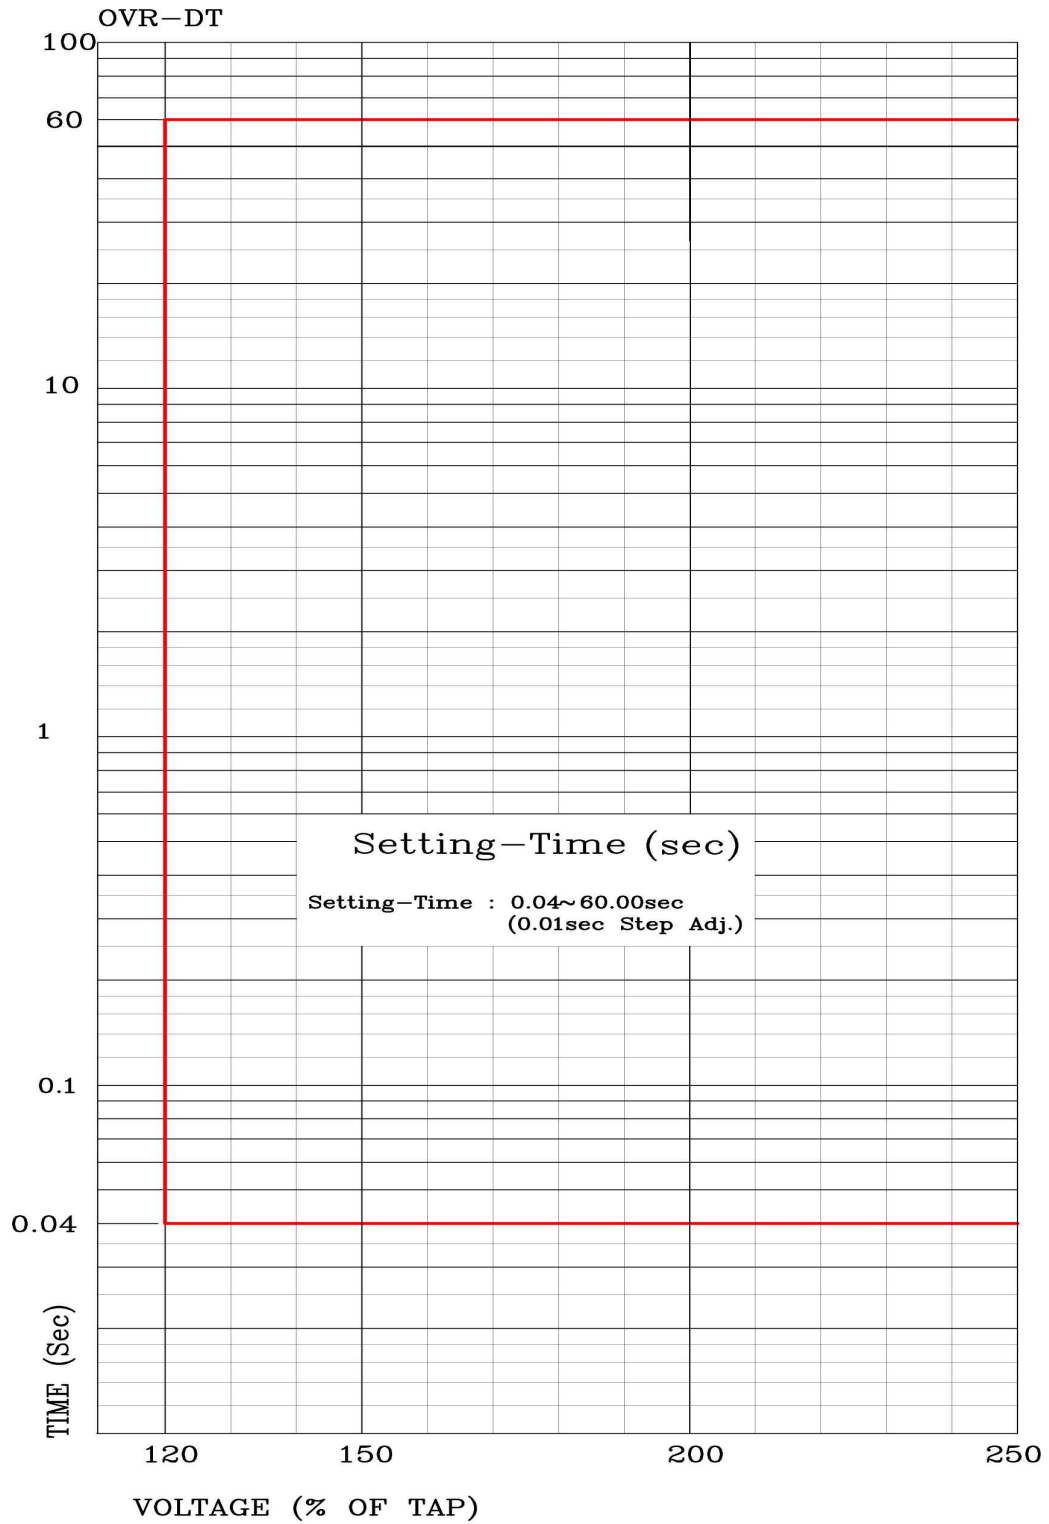

Appended 13. UnderVoltage Element Inverse Time Characteristic Curve

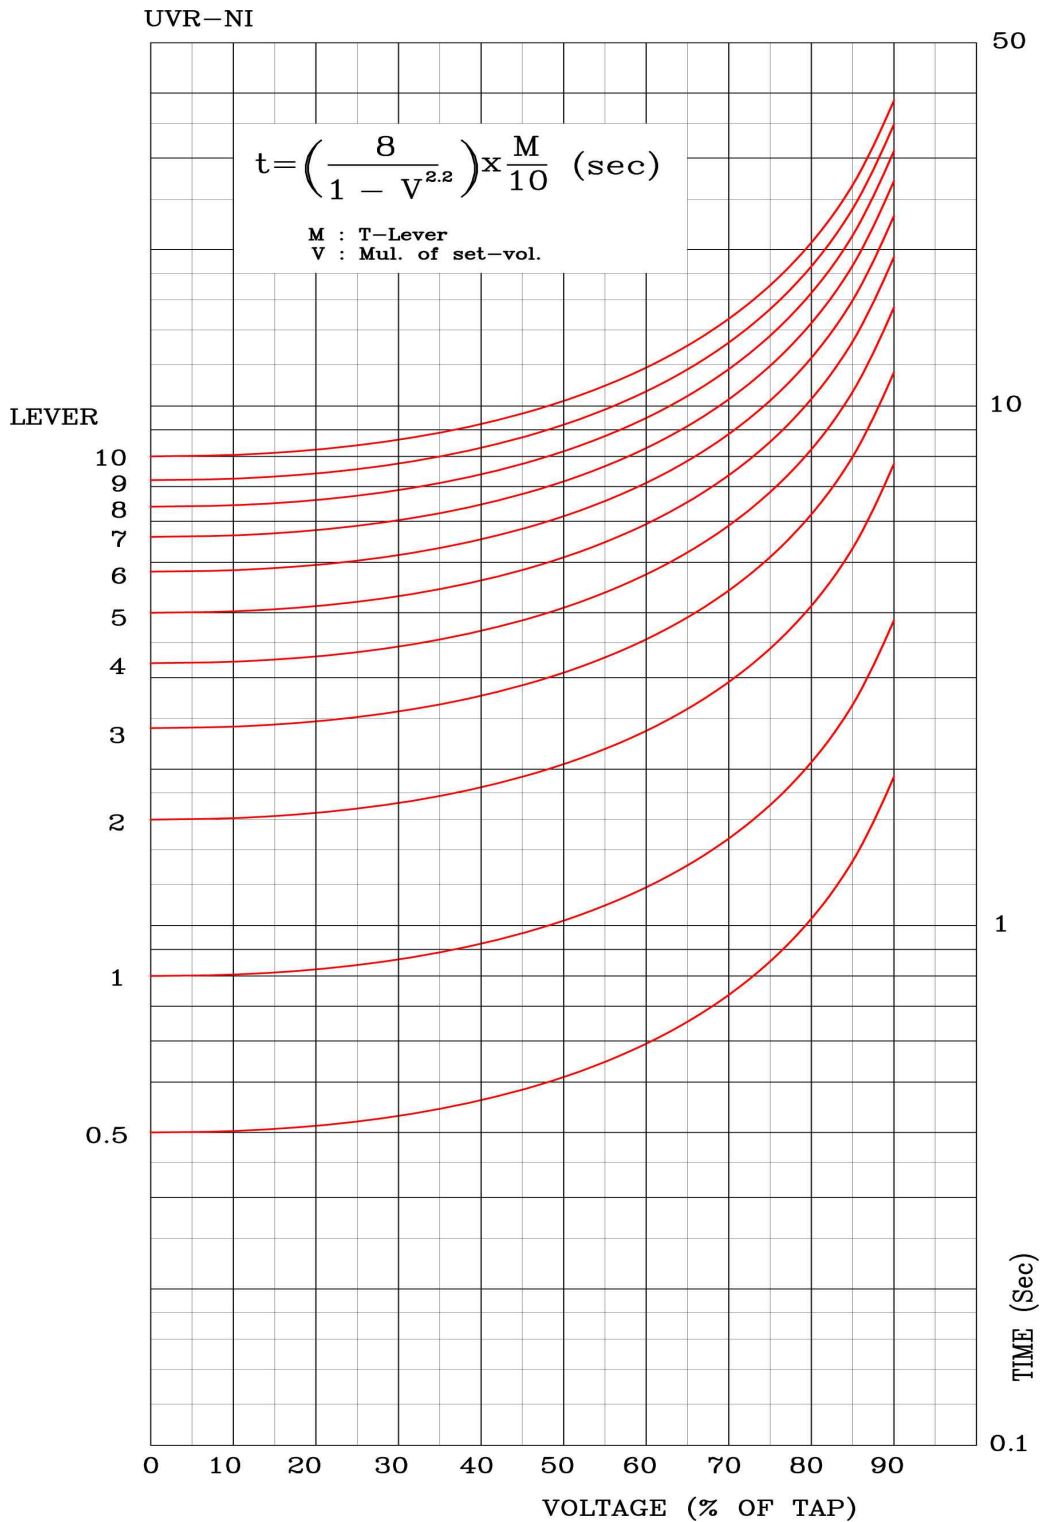

Appended 14. UnderVoltage Element Definite Time Characteristic Curve

